

Multi-ICE® Version 2.2.6

Installation Guide

Copyright © 1998-2005 ARM® Limited. All rights reserved.

Proprietary Notice

Words and logos marked with "®" or "™" are registered trademarks or trademarks owned by ARM Limited. Other brands and names mentioned herein may be the trademarks of their respective owners.

Neither the whole nor any part of the information contained in, or the product described in, this document may be adapted or reproduced in any material form except with the prior written permission of the copyright holder.

The product described in this document is subject to continuous developments and improvements. All particulars of the product and its use contained in this document are given by ARM in good faith. However, all warranties implied or expressed, including but not limited to implied warranties of merchantability, or fitness for purpose, are excluded.

This document is intended only to assist the reader in the use of the product. ARM Limited shall not be liable for any loss or damage arising from the use of any information in this document, or any error or omission in such information, or any incorrect use of the product.

Confidentiality Status

This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by ARM and the party that ARM delivered this document to.

Product Status

The information in this document is final, that is for a developed product.

Web Address

<http://www.arm.com>

Contents

Supported platforms	1
Installing Multi-ICE	2

1 Supported platforms

Multi-ICE v2.2.6 is supported on:

- Microsoft Windows
- Sun Solaris
- Red Hat Linux.

1.1 Microsoft Windows

Multi-ICE v2.2.6 is supported on Pentium IBM compatible machines running:

- Windows XP Professional Service Pack 2 or later
- Windows 2000, Service Pack 4 or later.

1.2 Sun Solaris

Multi-ICE v2.2.6 is supported on Sun SPARC compatible machines running:

- Sun Solaris 7
- Sun Solaris 8.

1.3 Red Hat Linux

Multi-ICE v2.2.6 is supported on Pentium IBM compatible machines running:

- Red Hat Linux 6.2 and 7.1.

2 Installing Multi-ICE

This section describes how to install Multi-ICE on:

- a Windows workstation
- a UNIX or Linux workstation.

You must have administrator privileges on Windows to install the Multi-ICE software.

2.1 Installation on Microsoft Windows workstations

To install Multi-ICE:

1. Insert the CD into the CD-ROM drive. The setup program starts. (If the setup program does not start, run `setup.exe` in the top-level directory of the CD-ROM.)
2. Follow the on-screen prompts to install Multi-ICE.

Before you use Multi-ICE

Before you use Multi-ICE:

- Read the file `readme.txt`. It contains the latest information on supported processors and known issues. The file is located in:
 - the root directory of the CD-ROM (\)
 - the Multi-ICE program group in Microsoft Windows
 - the UNIX installation directory under `/multiice_docs`.
- Install the eXDI-RDI driver if you want to connect to Multi-ICE from Microsoft Platform Builder. For further details, see the documentation in the `\eXDI_1.2` directory of the CD-ROM.

2.2 Installing on UNIX or Linux workstations

To install the Multi-ICE software on a UNIX system you require:

- An installed ADS product. You must install Multi-ICE into the same directory as your ADS installation.
- The UNIX versions of the Multi-ICE DLL and processor definition files, supplied on the Multi-ICE CD.
- A networked PC running the Multi-ICE server. This connects your UNIX Multi-ICE DLL to your target hardware.

To install the UNIX Multi-ICE software:

1. Insert the Multi-ICE CD.
2. Open a terminal window and ensure the CD-ROM is mounted. Refer to the system documentation for further information.
3. Change directory to directory `unix` under the CD-ROM root directory. For example:

```
cd /mnt/cdrom/unix
```
4. Run the installer, `install.sh`.
5. Follow the prompts to install Multi-ICE.

Note

- The Standard installation includes the DLL software and the PDF documentation. The Full installation includes the DLL software, the PDF and the Dynatext documentation. Dynatext is not available on Linux.
- You must install in the same location as your ADS installation. For example, if you have a copy of the AXD executable in:

```
/usr/local/arm/solaris/bin/axd
```

the pathname you must enter for Multi-ICE is `/usr/local/arm`.

You must enter the full pathname of the directory. You cannot use `~` or environment variables.

Before you use Multi-ICE

Before you use Multi-ICE:

- Read the file `readme.txt`. It contains the latest information on supported processors and known issues. The file is located in:
 - the root directory of the CD-ROM (`\`)
 - the Multi-ICE program group in Microsoft Windows
 - the UNIX installation directory under `/multiice_docs`.
- Run the `micesetup.sh` script *once*, to register the components used. This must be done by *every* user that wants to use Multi-ICE. You must ensure that your environment is configured to use ADS before running the `micesetup.sh` script. You can find the setup script in the following locations:
 - the `\unix` directory of the CD-ROM (`\`)
 - the UNIX installation directory.
- Install the updated ADS processor description files, if required. The updated files are in the `\ads` directory of the CD-ROM, and replace files in the `bin` directory within ADS 1.1 or 1.2.

