

# ARM® CoreLink™ TLX-400 Network Interconnect Thin Links

Revision: r1p0

**Supplement to ARM® CoreLink™ NIC-400 Network  
Interconnect Technical Reference Manual**



# ARM CoreLink TLX-400 Network Interconnect Thin Links

## Supplement to ARM CoreLink NIC-400 Network Interconnect Technical Reference Manual

Copyright © 2012-2016 ARM Limited or its affiliates. All rights reserved.

### Release Information

The following changes have been made to this book.

Change history			
Date	Issue	Confidentiality	Change
02 July 2012	A	Non-Confidential	First release for r0p0
07 May 2013	B	Non-Confidential	First release for r0p1
11 December 2013	C	Non-Confidential	First release for r0p2
07 March 2014	D	Non-Confidential	First release for r0p3
10 December 2015	E	Confidential	First Beta release for r1p0
04 March 2016	F	Non-Confidential	Second release for r1p0

### Proprietary Notice

This document is protected by copyright and other related rights and the practice or implementation of the information contained in this document may be protected by one or more patents or pending patent applications. No part of this document may be reproduced in any form by any means without the express prior written permission of ARM. No license, express or implied, by estoppel or otherwise to any intellectual property rights is granted by this document unless specifically stated.

Your access to the information in this document is conditional upon your acceptance that you will not use or permit others to use the information for the purposes of determining whether implementations infringe any third party patents.

THIS DOCUMENT IS PROVIDED “AS IS”. ARM PROVIDES NO REPRESENTATIONS AND NO WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE DOCUMENT. For the avoidance of doubt, ARM makes no representation with respect to, and has undertaken no analysis to identify or understand the scope and content of, third party patents, copyrights, trade secrets, or other rights.

This document may include technical inaccuracies or typographical errors.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL ARM BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF ARM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This document consists solely of commercial items. You shall be responsible for ensuring that any use, duplication or disclosure of this document complies fully with any relevant export laws and regulations to assure that this document or any portion thereof is not exported, directly or indirectly, in violation of such export laws. Use of the word “partner” in reference to ARM’s customers is not intended to create or refer to any partnership relationship with any other company. ARM may make changes to this document at any time and without notice.

If any of the provisions contained in these terms conflict with any of the provisions of any signed written agreement covering this document with ARM, then the signed written agreement prevails over and supersedes the conflicting provisions of these terms. This document may be translated into other languages for convenience, and you agree that if there is any conflict between the English version of this document and any translation, the terms of the English version of the Agreement shall prevail.

Words and logos marked with ® or ™ are registered trademarks or trademarks of ARM Limited or its affiliates in the EU and/or elsewhere. All rights reserved. Other brands and names mentioned in this document may be the trademarks of their respective owners. Please follow ARM’s trademark usage guidelines at, <http://www.arm.com/about/trademarks/guidelines/index.php>

Copyright © 2012-2016 ARM Limited or its affiliates. All rights reserved.

ARM Limited. Company 02557590 registered in England.

110 Fulbourn Road, Cambridge, England CB1 9NJ.

LES-PRE-20348

**Confidentiality Status**

This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by ARM and the party that ARM delivered this document to.

**Product Status**

The information in this document is final, that is for a developed product.

**Web Address**

<http://www.arm.com>

Contents

**ARM CoreLink TLX-400 Network Interconnect Thin  
Links Supplement to ARM CoreLink NIC-400  
Network Interconnect Technical Reference Manual**

<b>Chapter 1</b>	<b>Introduction</b>	
	1.1 About the product .....	1-2
	1.2 Key features .....	1-3
	1.3 Product revisions .....	1-4
<b>Chapter 2</b>	<b>Functional Description</b>	
	2.1 Interfaces .....	2-2
	2.2 Operation .....	2-7
<b>Appendix A</b>	<b>Revisions</b>	

# Chapter 1

## Introduction

This chapter introduces the CoreLink TLX-400 Network Interconnect Thin Links. For convenience Thin Links is referred to as TLX. This chapter contains the following sections:

- [\*About the product on page 1-2.\*](#)
- [\*Key features on page 1-3.\*](#)
- [\*Product revisions on page 1-4.\*](#)

## 1.1 About the product

The CoreLink TLX-400 Network Interconnect Thin Links is an extension to the CoreLink NIC-400 Network Interconnect base product and provides a mechanism to reduce the number of signals in an AXI point-to-point connection and enable it to be routed over a longer distance.

## 1.2 Key features

The CoreLink TLX-400 Network Interconnect Thin Links has the following features:

- TLX reduces routing congestion and aids timing closure of point-to-point connections. Point-to-point connections are implemented as forward and reverse links. Each link can be independently configured to reduce the number of wires the connection requires.
- TLX supports clock domain crossing to aid physical implementation:
  - The end points of the TLX are always specified to be in a different clock domain. The relationship of the clocks must be defined as asynchronous.
- TLX can incorporate other NIC-400 functions. For example:
  - A connection between components of different data widths.
  - A connection between components of different protocols.
- TLX can be used with *Quality of Service for Virtual Networks (QVN-400)*. For more information, see the *ARM® CoreLink™ QVN-400 Network Interconnect Advanced Quality of Service for Virtual Networks, Supplement to ARM® CoreLink™ NIC-400 Network Interconnect Technical Reference Manual*.
- TLX can be used with *Advanced Quality of Service (QoS-400)*. For more information, see the *ARM® CoreLink™ QoS-400 Network Interconnect Advanced Quality of Service, Supplement to ARM® CoreLink™ NIC-400 Network Interconnect Technical Reference Manual*.
- TLX is implemented as a forward and reverse link. Each link is partitioned into three functional sections:
  - *Interface Layer (IL)*.
  - *Data Link Layer (DLL)*.
  - *Physical Layer (PL)*.
- The IL presents the AMBA protocol-compliant interface and performs:
  - Channel identification of transfer packets across the link.
  - Arbitration between transfer packets on to the link.
  - Packing of transfer packets on to the link.
  - Flow control across the link.
- The DLL performs buffering of transfer packets at the destination end of each link.
- You can modify or replace the PL to enable different physical implementations.
- You can enable hierarchical clock gating support for the destination domain.
- You can enable hierarchical clock gating signaling for the source domain.
- You can configure support for power domain crossing.

## 1.3 Product revisions

This section describes the differences in functionality between product revisions:

<b>r0p0</b>	First release.
<b>r0p1</b>	Second release. No technical updates.
<b>r0p2</b>	Third release. Updated <a href="#">Figure 2-2 on page 2-7</a> and <a href="#">Figure 2-3 on page 2-8</a> .
<b>r0p3</b>	Fourth release. No technical updates.
<b>r1p0</b>	Fifth release. No technical updates.
<b>r1p0</b>	Sixth release. No functional updates. Updated <a href="#">Figure 2-2 on page 2-7</a> and <a href="#">Figure 2-3 on page 2-8</a> to add new hierarchical domains.



# Chapter 2


## Functional Description

This chapter provides a functional description of the CoreLink TLX-400 Network Interconnect Thin Links and how it works. It contains the following sections:

- [Interfaces on page 2-2.](#)
- [Operation on page 2-7.](#)

## 2.1 Interfaces

TLX-400 enables TLX protocol functionality to be added to NIC-400 slave and master interfaces in a larger system, as shown in [Figure 2-1](#).

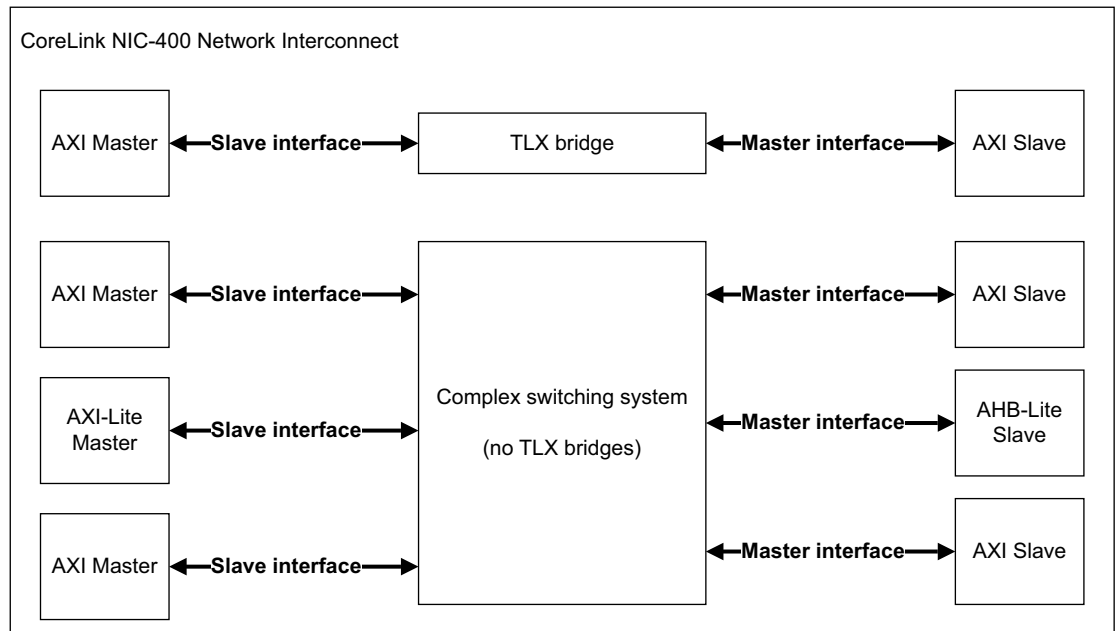

**Figure 2-1** TLX in a larger NIC-400 configuration

This section describes:

- [Slave interfaces](#).
- [Master interfaces](#) on page 2-3.
- [Low-power interface](#) on page 2-3.
- [Physical layer interfaces](#) on page 2-4.
- [Signal descriptions](#) on page 2-4.

### 2.1.1 Slave interfaces

Within NIC-400, you can only configure TLX as a bridge, that is, TLX can only support a single slave interface. However, it is possible for one or more TLX bridges to be configured within a larger NIC, as shown in [Figure 2-1](#).

The TLX supports all the slave interfaces that the base NIC-400 product supports. These are:

- AXI3.
- AXI4.
- AHB-Lite slave.
- AHB-Lite mirrored master.

You can only configure an AHB slave interface if the master interface is not of type AHB, that is, neither an AHB to AHB bridge nor an AHB to AHB TLX bridge is supported.

You can configure a slave interface to support QVN if:

- The QVN product license is installed.
- The slave interface type is AXI3 or AXI4.

See the *ARM® CoreLink™ QVN-400 Network Interconnect Advanced Quality of Service for Virtual Networks Supplement to ARM® CoreLink™ NIC-400 Network Interconnect Technical Reference Manual*.

### 2.1.2 Master interfaces

Within NIC-400, you can only configure TLX as a bridge, that is, TLX can only support one master interface. However, it is possible for the TLX bridge to be configured within a larger NIC, as [Figure 2-1 on page 2-2](#) shows.

The TLX supports all the master interfaces that the base NIC-400 product does. These are:

- AXI3.
- AXI4.
- AHB-Lite slave.
- AHB-Lite mirrored master.

You can only configure an AHB master interface provided the slave interface is not type AHB, that is, neither an AHB to AHB bridge nor an AHB to AHB TLX bridge is supported.

You can configure a master interface to support QVN if:

- The QVN product license is installed.
- The slave interface type is AXI3 or AXI4.
- The slave interface is configured to support QVN.

See the *ARM® CoreLink™ QVN-400 Network Interconnect Advanced Quality of Service for Virtual Networks Supplement to ARM® CoreLink™ NIC-400 Network Interconnect Technical Reference Manual*.

### 2.1.3 Low-power interface

This section describes:

- [Hierarchical clock gating interfaces](#).
- [Power domain crossing interfaces](#).

#### Hierarchical clock gating interfaces

When the TLX bridge is configured to support hierarchical clock gating there is a *Low-power Interface* (LPI) to enable clock gating of the master interface clock domain. See the *ARM® AMBA® AXI™ and ACE Protocol Specification* for more information on the LPI.

When the LPI indicates that the low-power state has been entered then the clock for the master interface domain can be clock gated.

When the TLX bridge is configured to support hierarchical clock gating, there is a **caactive** signal output from the slave clock domain to help in clock gating of the slave interface domain. It is driven HIGH when the TLX requires the clock, and must be incorporated in the slave interface clock domain clock controller.

#### Power domain crossing interfaces

When a bridge is configured to support *Power Domain Crossing* (PDC), hierarchical clock gating support is also included.

An extra PDC LPI is output from the slave domain to support the power gating sequence. When the PDC LPI is changing mode of operation, the slave domain clock must be operational. The bridge slave domain asserts an extra LPI **active** signal, to indicate that a clock is required and must not be turned off.

If the PDC LPI indicates that the low-power state has been entered, either power domain can be power gated.

---

**Note**

---

If the master domain is powered down, any transactions that are issued to the slave domain are stalled at the interface.

---

## 2.1.4 Physical layer interfaces

You can replace the physical layer to enable flexibility in the implementation.

There are two interfaces in each direction. These are AXI stream compliant. See the *ARM® AMBA® 4 AXI4-Stream Protocol Specification* for more information.

### Forward direction

These interfaces consist of:

#### AXI stream data interface

AXI stream data interface. The forward link width you define in the AMBA Designer GUI, or the CoreLink Creator GUI, defines the data width of the interface.

#### AXI stream flow control interface

The number of response channels that are R and B for an AXI to AXI bridge defines the data width of the interface.

### Reverse direction

These interfaces consist of:

#### AXI stream data interface

The reverse link width you define in the AMBA Designer GUI or the CoreLink Creator GUI defines the data width of the interface.

#### AXI stream flow control interface

Provided QVN is enabled, the number of response channels, that is, AW, AR, and W multiplied by the number of virtual networks, defines the data width of the interface.

## 2.1.5 Signal descriptions

The interface signals are listed in [Table 2-1 on page 2-5](#). For more information on these signals see the *ARM® AMBA® 4 AXI4-Stream Protocol Specification*.

[Table 2-1 on page 2-5](#) uses the following parameters to define the signal widths:

Where:

**n** Data bus width in bits.

- m** Flow control bus width in bits. For a forward *Physical Layer* (PL):
- For an AHB TLX-400 bridge:**  
The flow control bus width = 1.
- For an AXI TLX-400 bridge:**  
The flow control bus width = 2.
- For an AXI TLX-400 bridge with QVN AMBA quality of service using virtual networks:**  
The flow control bus width = 2 \* number of virtual networks.

**Table 2-1 Forward PL interface signal descriptions**

Signal Name	Description
<b>pl_fwd_x_tlxclk</b>	This is the clock source and the global clock signal. All signals are sampled on the rising edge of <b>pl_fwd_x_tlxclk</b> .
<b>pl_fwd_x_tresetn</b>	This is the reset source and the global reset signal. <b>pl_fwd_x_tresetn</b> is active-LOW.
<b>tvalid_pl_fwd_x_s_stream</b>	Indicates a valid data transfer is being presented to the forward PL.
<b>tdata_pl_fwd_x_s_stream[(n-1):0]</b>	This is the data payload input.
<b>tready_pl_fwd_x_s_stream</b>	Indicates that the slave can accept a transfer in the current cycle.
<b>tvalid_pl_fwd_x_m_stream</b>	Indicates that the forward physical layer is presenting a valid data transfer to the forward <i>Data Link Layer</i> (DLL).
<b>tdata_pl_fwd_x_m_stream[(n-1):0]</b>	This is the data payload output.
<b>tready_pl_fwd_x_m_stream</b>	Indicates that the forward data link layer can accept a transfer in the current cycle.
<b>tvalid_pl_fwd_x_s_flow</b>	Indicates a valid flow control transfer is being presented to the forward PL.
<b>tdata_pl_fwd_x_s_flow[(m-1):0]</b>	This is the flow control payload input.
<b>tready_pl_fwd_x_s_flow</b>	Indicates that the slave can accept a transfer in the current cycle.
<b>tvalid_pl_fwd_x_m_flow</b>	Indicates that the forward physical layer is presenting a valid flow control transfer to the forward DLL.
<b>tdata_pl_fwd_x_m_flow[(m-1):0]</b>	This is the flow control payload output.
<b>tready_pl_fwd_x_m_flow</b>	Indicates that the forward data link layer can accept a transfer in the current cycle.

Table 2-2 on page 2-6 uses the following parameters to define the signal widths:

Where:

- n** Data bus width in bits.
- m** Flow control bus width in bits. For a reverse physical layer:
- For an AHB TLX-400 bridge:**  
The flow control bus width = 2.
- For an AXI TLX-400 bridge:**  
The flow control bus width = 3.
- For an AXI TLX-400 bridge with QVN AMBA quality of service using virtual networks:**  
The flow control bus width = 3 \* number of virtual networks.

**Table 2-2 Reverse PL interface signal descriptions**

<b>Signal Name</b>	<b>Description</b>
<b>pl_rev_x_tlxclk</b>	This is the clock source and the global clock signal. All signals are sampled on the rising edge of <b>pl_rev_x_tlxclk</b> .
<b>pl_rev_x_tresetn</b>	This is the reset source and the global reset signal. <b>pl_rev_x_tresetn</b> is active-LOW.
<b>tvalid_pl_rev_x_s_stream</b>	Indicates a valid data transfer is being presented to the reverse PL.
<b>tdata_pl_rev_x_s_stream[(n-1):0]</b>	This is the data payload input.
<b>tready_pl_rev_x_s_stream</b>	Indicates that the slave can accept a transfer in the current cycle.
<b>tvalid_pl_rev_x_m_stream</b>	Indicates that the reverse physical layer is presenting a valid data transfer to the reverse DLL.
<b>tdata_pl_rev_x_s_flow[(m-1):0]</b>	This is the data payload output.
<b>tready_pl_rev_x_m_stream</b>	Indicates that the reverse data link layer can accept a transfer in the current cycle.
<b>tvalid_pl_rev_x_s_flow</b>	Indicates a valid flow control transfer is being presented to the reverse PL.
<b>tdata_pl_rev_x_s_flow[(m-1):0]</b>	This is the flow control payload input.
<b>tready_pl_rev_x_s_flow</b>	Indicates that the slave can accept a transfer in the current cycle.
<b>tvalid_pl_rev_x_m_flow</b>	Indicates that the reverse physical layer is presenting a valid flow control transfer to the reverse DLL.
<b>tdata_pl_rev_x_m_flow[(m-1):0]</b>	This is the flow control payload output.
<b>tready_pl_rev_x_m_flow</b>	Indicates that the reverse data link layer can accept a transfer in the current cycle.

## 2.2 Operation

Figure 2-2 shows the TLX hierarchy.

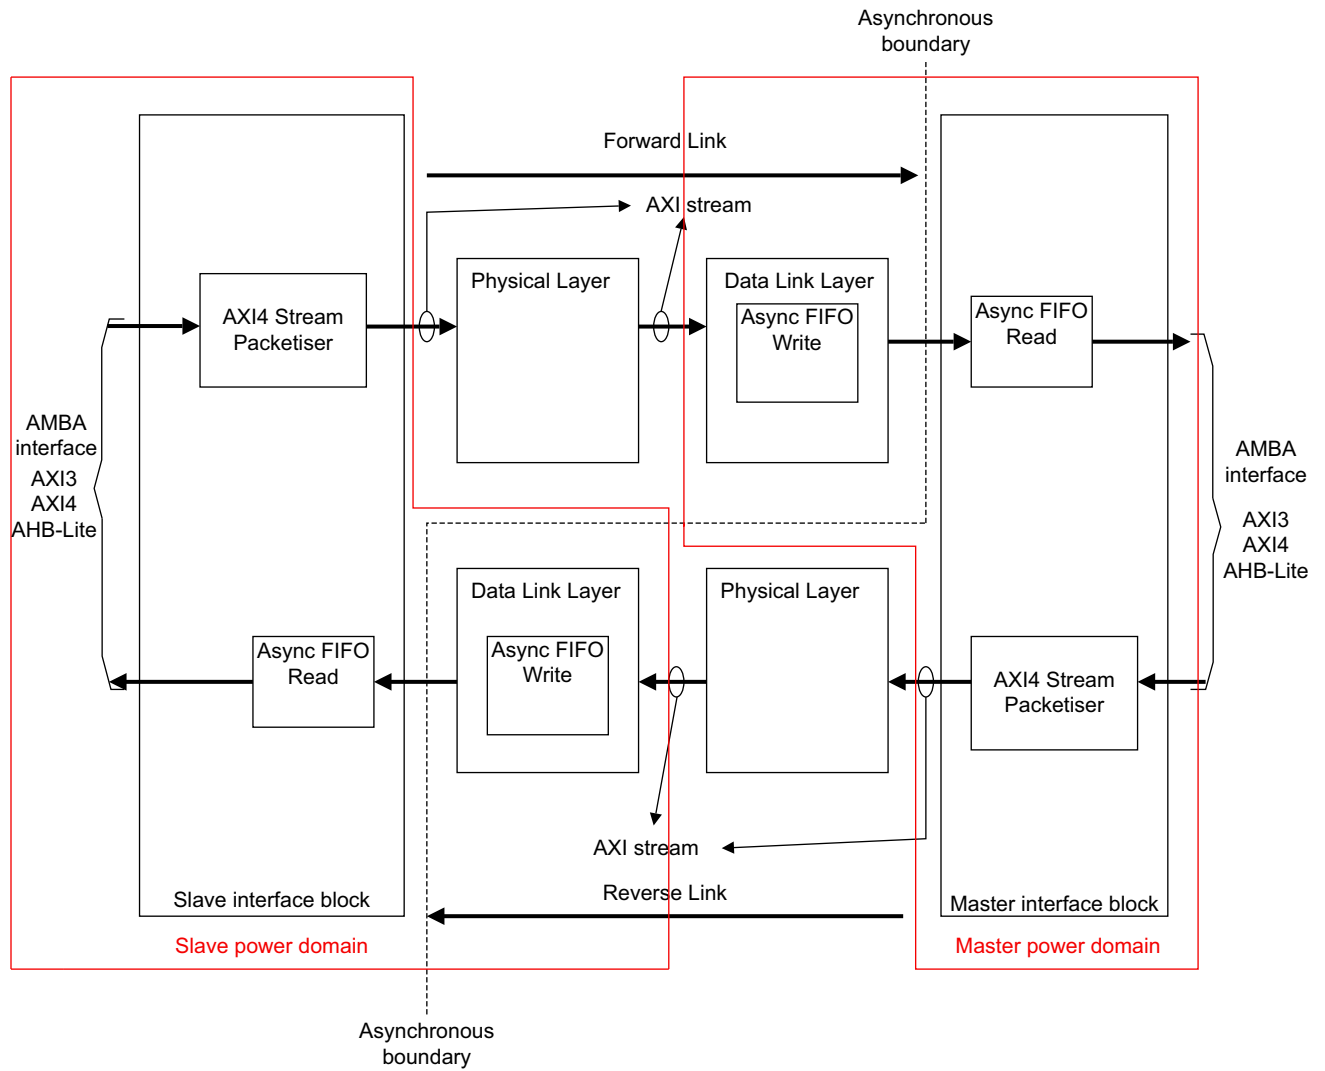


Figure 2-2 TLX hierarchy

### 2.2.1 TLX

The TLX consists of two AXI stream interfaces for each direction:

- Forward data.
- Reverse data.
- Forward flow.
- Reverse flow.

Figure 2-3 on page 2-8 shows the TLX hierarchical structure.

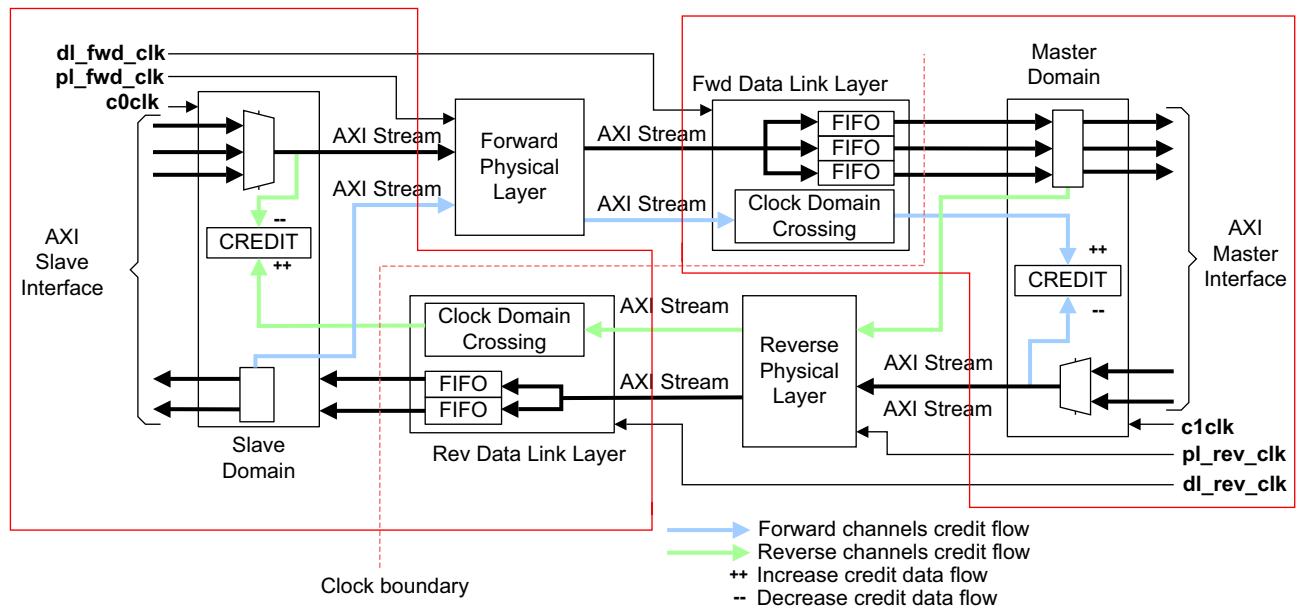


Figure 2-3 TLX hierarchical structure

The data stream links transport the AMBA forward and reverse channel beats. The flow stream interfaces are used for replenishment of credit tokens.

This architecture means that the TLX bridge operation is independent of the physical layer latency.

This section describes:

- [Forward AMBA channels](#).
- [Response AMBA channels on page 2-9](#).
- [Data packing on page 2-9](#).
- [Arbitration on page 2-10](#).

### Forward AMBA channels

To guarantee that the data link does not stall and therefore cause blocking between channels, a forward channel beat is only issued onto the forward data stream link when that channel has credit, indicating that there is space at the destination to accept that beat. Therefore, a channel credit is consumed when a beat is issued into the physical layer data stream link. The number of credits is equal to the number of buffer slots available for that channel at the destination. When the credits are all consumed for a channel, then no more beats are issued onto the data stream interface.

When a destination buffer slot is emptied through a beat being issued downstream out of the Thin Link bridge, a flow control credit for that channel is returned back across the reverse flow control stream link.



## Response AMBA channels

To guarantee that the data link does not stall and therefore cause blocking between channels, a reverse channel beat is issued onto the reverse data stream link when that channel has credit, indicating that there is space at the destination to accept that beat. Therefore, the credit of a channel is consumed when a beat is issued into the physical layer data stream link. The number of credits is equal to the number of buffer slots available for that channel at the destination. When the credits are all consumed for a channel then no more beats are issued onto the data stream interface.

When a destination buffer slot is emptied through a beat being issued back upstream out of the TLX bridge, a flow control credit for that channel is then returned back across the forward flow control stream link.

## Data packing

Five different packing strategies are available. There is no requirement to use the same strategy in both forward and reverse directions:

- Widest Width.
- Widest Width / 2.
- Widest Width / 4.
- Forward or Reverse channels:
  - Address Width + Data Width, for forward channels only.
  - Read Data Width + Response, for reverse channels only.
- User Defined.

### Widest Width

This is the width of the widest channel in the direction under consideration.

### Widest Width / 2

This is half the width of the widest channel in the direction under consideration.

### Widest Width / 4

This is a quarter of the width of the widest channel in the direction under consideration.

### Forward or Reverse channels:

- Address Width + Data Width.  
This is the widest address channel plus the widest data width in the forward link direction.
- Read Data Width + Response.  
This is the width of the read data plus response in the reverse link direction.

### User Defined (in Bytes)

This is any multiple byte width up to a maximum of the widest channel / 2.

### ———— Note —————

See *Configuring Thin Links in the Configuring the Network* chapter of the *ARM® CoreLink™ NIC-400 Network Interconnect Supplement to ARM® CoreLink™ ADR-400 AMBA® Designer User Guide*.

## Arbitration

This entails arbitration of which channel to issue to the link. When there is a choice of channels available, it is achieved by using the **awqos** value, **arqos** value, or the stored **awqos** value associated with the current W channel traffic. The reverse link selection uses a round robin arbitration.

---

### Note

---

For more information on **axqos** values, see the *ARM® CoreLink™ QoS-400 Network Interconnect Advanced Quality of Service, Supplement to ARM® CoreLink™ NIC-400 Network Interconnect Technical Reference Manual*.

---

# Appendix A

## Revisions

This appendix describes the technical changes between released issues of this book.

**Table A-1 Issue A**

Change	Location	Affects
First release	-	-

**Table A-2 Differences between issue A and issue B**

Change	Location	Affects
Diagram added to Thin Link section for clarity, that is a subsection of Operation	<a href="#">TLX on page 2-7</a>	All revisions

**Table A-3 Differences between issue B and issue C**

Change	Location	Affects
Updated key features	<a href="#">Key features on page 1-3</a>	All revisions
Added paragraph for clarification	<a href="#">Low-power interface on page 2-3</a>	All revisions
Signal descriptions section added	<a href="#">Signal descriptions on page 2-4</a>	All revisions
Updated TLX hierarchy diagram	<a href="#">TLX hierarchy on page 2-7</a>	All revisions
Updated TLX hierarchy structure diagram	<a href="#">TLX hierarchical structure on page 2-8</a>	All revisions

**Table A-4 Differences between issue C and issue D**

Change	Location	Affects
No technical changes	-	r0p3

**Table A-5 Differences between issue D and issue E**

Change	Location	Affects
No technical changes	-	r1p0

**Table A-6 Differences between issue E and issue F**

Change	Location	Affects
Updated section to include CoreLink Creator	<i>Physical layer interfaces on page 2-4</i>	r1p0
Updated TLX diagram to reflect domains	<i>Figure 2-2 on page 2-7</i>	r1p0
Updated TLX hierarchical structure diagram to reflect domains	<i>Figure 2-3 on page 2-8</i>	r1p0