



Integrator/CM922T-XA10 Example and Support Information Installation Guide

Copyright © 2002. All rights reserved.

Proprietary Notice

Words and logos marked with or are registered trademarks or trademarks owned by ARM Limited, except as otherwise stated below in this proprietary notice. Other brands and names mentioned herein may be the trademarks of their respective owners.

Neither the whole nor any part of the information contained in, or the product described in, this document may be adapted or reproduced in any material form except with the prior written permission of the copyright holder.

The product described in this document is subject to continuous developments and improvements. All particulars of the product and its use contained in this document are given by ARM in good faith. However, all warranties implied or expressed, including but not limited to implied warranties of merchantability, or fitness for ourose, are excluded.

This document is intended only to assist the reader in the use of the product. ARM Limited shall not be liable for any loss or damage arising from the use of any information in this document, or any error or omission in such information, or any incorrect use of the product.

Contents

Introduction

THE OCCUPANT OF THE PROPERTY O	٠.
Installing the CD-ROM Contents	.2
Further Reading	
Feedback	

1 Introduction

This booklet describes how to install examples and documentation for the Integrator**/CM922T-XA10 core module onto a Windows workstation. The CD-ROM contains compressed files for the Integrator/CM922T-XA10 core module that enables it to be used standalone, with an Integrator/AP motherboard, and Integrator/CP baseboard, or with an Integrator/IM-PD1.

Full details of the files and folders can be found in filelist.txt in the \docs directory. The CD-ROM conforms to the Microsoft Joliet format.

2 Installing the CD-ROM Contents

This section describes how to install the contents of the CD-ROM onto the hard disk of your Windows workstation.

To install the contents of the CD-ROM onto your hard disk:

1. Place the CD-ROM in your CD-ROM drive.

The installer software automatically loads and executes.

(If your computer does not automatically start the installer, select Run from the Start menu, and enter <CD $drive>:\setup.exe.$)

The installer is displayed.

- 2. Read and confirm your agreement to the licensing conditions that are displayed.
- When prompted, select the drive and directory that the CD-ROM contents are to be installed into.The files for the core module are uncompressed and copied onto your hard disk.

3 Further Reading

This section provides references to related publications.

3.1 ARM publications

The following publications provide information about related ARM products and toolkits:

- Integrator/CM922T-XA10 User Guide (ARM DUI 0184)
- Integrator/IM-PD1 User Guide (ARM DUI 0152)
- ARM Integrator/AP User Guide (ARM DUI 0098)
- ARM Integrator/CP User Guide (ARM DUI 0159)
- ARM Multi-ICE User Guide (ARM DUI 0048)
- AMBA Specification (ARM IHI 0011)
- ARM Architecture Reference Manual (ARM DDI 0100)
- ARM Firmware Suite Reference Guide (ARM DUI 0102)
- ARM Software Development Toolkit User Guide (ARM DUI 0040)
- ARM Software Development Toolkit Reference Guide (ARM DUI 0041)
- ADS Tools Guide (ARM DUI 0067)
- ADS Debuggers Guide (ARM DUI 0066)
- ADS Debug Target Guide (ARM DUI 0058)
- ADS Developer Guide (ARM DUI 0056)
- ADS CodeWarrior IDE Guide (ARM DUI 0065).

3.2 Other publications

The following publications provides information about the ARM architecture:

- ARM Architecture Reference Manual, edited by David Seal, ISBN 0-201-737191
- ARM System-on-chip Architecture, Steve Furber, ISBN 0-201-67519-6
- Excalibur ARM-Based Embedded Processor PLDs Hardware Reference Manual (A-DS-EXCARMD), Altera Corporation.

4 Feedback

This section describes how to report problems and comments on this product and its documentation.

4.1 CD-ROM contents

If you have feedback on contents of this CD-ROM, please contact your supplier. To help us to provide a rapid and useful response, please give:


- · details of the release you are using, such as the version number and build number
- details of the host and target you are running on
- a small standalone sample of code that reproduces the problem
- · a clear explanation of what you expected to happen, and what actually happened
- the commands you used (including any command-line options)
- · sample output illustrating the problem
- · details of the JTAG unit you are using, including the version number and build number, if supplied.

4.2 Feedback on this book

If you have any problem with these instructions, please send an email to errata@arm.com giving:

- the document title
- the document number
- the page number(s) to which your comments apply
- · a concise explanation of the problem.

General suggestions for additions and improvements are also welcome.

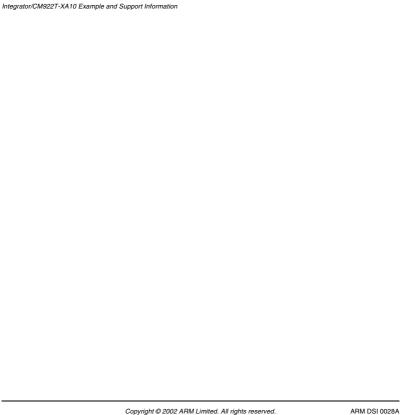

Introduct VATO	Example and Support Information
Integrator/CIVI9221-XA10	Example and Support Information

Back page - replace with cover artwork