



Arm[®] Keil[®] Studio Visual Studio Code Extensions

User Guide

Non-Confidential

Copyright © 2023–2024 Arm Limited (or its affiliates).
All rights reserved.

Issue 10

108029_0000_10_en



Arm® Keil® Studio Visual Studio Code Extensions

User Guide

Copyright © 2023–2024 Arm Limited (or its affiliates). All rights reserved.

Release information

Document history

Issue	Date	Confidentiality	Change
0000-01	13 July 2023	Non-Confidential	First release
0000-02	20 July 2023	Non-Confidential	Updates
0000-03	6 September 2023	Non-Confidential	Updates
0000-04	3 October 2023	Non-Confidential	Updates
0000-05	19 October 2023	Non-Confidential	Updates
0000-06	14 November 2023	Non-Confidential	Updates
0000-07	5 December 2023	Non-Confidential	Updates
0000-08	20 December 2023	Non-Confidential	Updates
0000-09	31 January 2024	Non-Confidential	Updates
0000-10	29 February 2024	Non-Confidential	Updates

Proprietary Notice

This document is protected by copyright and other related rights and the use or implementation of the information contained in this document may be protected by one or more patents or pending patent applications. No part of this document may be reproduced in any form by any means without the express prior written permission of Arm Limited ("Arm"). No license, express or implied, by estoppel or otherwise to any intellectual property rights is granted by this document unless specifically stated.

Your access to the information in this document is conditional upon your acceptance that you will not use or permit others to use the information for the purposes of determining whether the subject matter of this document infringes any third party patents.

The content of this document is informational only. Any solutions presented herein are subject to changing conditions, information, scope, and data. This document was produced using

reasonable efforts based on information available as of the date of issue of this document. The scope of information in this document may exceed that which Arm is required to provide, and such additional information is merely intended to further assist the recipient and does not represent Arm's view of the scope of its obligations. You acknowledge and agree that you possess the necessary expertise in system security and functional safety and that you shall be solely responsible for compliance with all legal, regulatory, safety and security related requirements concerning your products, notwithstanding any information or support that may be provided by Arm herein. In conjunction with any Arm technology described in this document, and to minimize risks, adequate design and operating safeguards should be provided for by you.

This document may include technical inaccuracies or typographical errors. THIS DOCUMENT IS PROVIDED "AS IS". ARM PROVIDES NO REPRESENTATIONS AND NO WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE DOCUMENT. For the avoidance of doubt, Arm makes no representation with respect to, and has undertaken no analysis to identify or understand the scope and content of, any patents, copyrights, trade secrets, trademarks, or other rights.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL ARM BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF ARM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Reference by Arm to any third party's products or services within this document is not an express or implied approval or endorsement of the use thereof.

This document consists solely of commercial items. You shall be responsible for ensuring that any permitted use, duplication, or disclosure of this document complies fully with any relevant export laws and regulations to assure that this document or any portion thereof is not exported, directly or indirectly, in violation of such export laws. Use of the word "partner" in reference to Arm's customers is not intended to create or refer to any partnership relationship with any other company. Arm may make changes to this document at any time and without notice.

This document may be translated into other languages for convenience, and you agree that if there is any conflict between the English version of this document and any translation, the terms of the English version of this document shall prevail.

The validity, construction and performance of this notice shall be governed by English Law.

The Arm corporate logo and words marked with ® or ™ are registered trademarks or trademarks of Arm Limited (or its affiliates) in the US and/or elsewhere. Please follow Arm's trademark usage guidelines at <https://www.arm.com/company/policies/trademarks>. All rights reserved. Other brands and names mentioned in this document may be the trademarks of their respective owners.

Arm Limited. Company 02557590 registered in England.

110 Fulbourn Road, Cambridge, England CB1 9NJ.

PRE-1121-V1.0

Confidentiality Status

This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by Arm and the party that Arm delivered this document to.

Unrestricted Access is an Arm internal classification.

Product Status

The information in this document is Final, that is for a developed product.

Feedback

Arm welcomes feedback on this product and its documentation. To provide feedback on the product, create a ticket on <https://support.developer.arm.com>

To provide feedback on the document, fill the following survey: <https://developer.arm.com/documentation-feedback-survey>.

Inclusive language commitment

Arm values inclusive communities. Arm recognizes that we and our industry have used language that can be offensive. Arm strives to lead the industry and create change.

We believe that this document contains no offensive language. To report offensive language in this document, email terms@arm.com.

Contents

1. Introduction.....	9
1.1 Conventions.....	9
1.2 Other information.....	10
2. Extension pack and extensions.....	11
2.1 Arm Keil Studio Pack.....	11
3. Intended use cases for the extensions.....	13
4. Get started with an example project.....	14
4.1 Import a csolution example.....	15
4.2 Download and convert a Keil µVision example.....	16
4.3 Finalize the setup of your development environment.....	17
4.3.1 Configure an HTTP proxy (optional).....	18
4.3.2 clangd (alternative).....	18
4.4 Build the example project.....	18
4.5 Choose a context for your csolution.....	19
4.6 Look at the Solution outline.....	19
4.7 Install CMSIS-Packs and select software components from packs.....	20
4.8 Connect your board.....	20
4.9 Run the csolution on your board.....	20
4.10 Start a debug session.....	21
5. Arm Environment Manager extension.....	22
5.1 Tools installation with Microsoft vcpkg.....	22
5.2 Check the tools installed with Microsoft vcpkg.....	22
5.3 Modify the manifest file.....	23
5.4 vcpkg activation options.....	23
5.5 Use vcpkg from the command line.....	24
5.6 Confirm automatic activation.....	24
5.7 Use the Environment Configuration visual editor.....	24
6. Arm CMSIS csolution extension.....	25
6.1 CMSIS solutions.....	25

6.2 Set a context for your csolution.....	26
6.3 Use the Solution outline.....	27
6.4 CMSIS-Packs.....	29
6.5 Install CMSIS-Packs.....	29
6.5.1 Install missing CMSIS-Packs.....	30
6.5.2 Explore the available CMSIS-Packs.....	30
6.6 Manage software components.....	31
6.6.1 Open the Software Components view.....	31
6.6.2 Modify the software components in your project.....	33
6.6.3 Undo changes.....	34
6.7 Create a csolution project.....	34
6.8 Convert a Keil µVision project to a csolution project.....	37
6.9 Configure a build task.....	38
6.10 Initialize your csolution project.....	38
6.11 Use the CMSIS csolution API.....	39
7. Arm Device Manager extension.....	40
7.1 Supported hardware.....	40
7.1.1 Supported development boards and MCUs.....	40
7.1.2 Supported debug probes.....	40
7.2 Connect your hardware.....	41
7.3 Edit your hardware.....	41
7.4 Open a serial monitor.....	42
8. Arm Debugger extension.....	43
8.1 Run your project on your hardware with Arm Debugger.....	43
8.1.1 Configure a task.....	43
8.1.2 Override or extend the default run configuration options for Arm Debugger.....	44
8.1.3 Arm Debugger run configuration options.....	44
8.1.4 Use the Run and Debug Configuration visual editor for your run configuration.....	45
8.1.5 Run your project.....	47
8.2 Debug your project with Arm Debugger.....	48
8.2.1 Add configuration.....	48
8.2.2 Override or extend the default debug configuration options for Arm Debugger.....	48
8.2.3 Arm Debugger debug configuration options.....	49
8.2.4 Use the Run and Debug Configuration visual editor for your debug configuration.....	50
8.2.5 Start an Arm Debugger session.....	52

8.2.6 Set breakpoints.....	53
8.2.7 Inspect registers.....	53
8.2.8 Next steps.....	55
9. Activate your license to use Arm tools.....	56
9.1 Troubleshooting expired or cache-expired licenses.....	56
10. Use CMSIS-Toolbox from the command line.....	57
10.1 Add CMSIS-Toolbox to the system PATH.....	57
10.2 Support for packs.....	57
10.2.1 Add public packs.....	58
10.2.2 Add private local packs.....	58
10.2.3 Add private remote packs.....	59
10.2.4 Remove packs.....	59
11. Debug your projects in the cloud with Arm Embedded Debugger.....	60
11.1 Run your project on your hardware with Arm Embedded Debugger.....	60
11.1.1 Configure a task.....	60
11.1.2 Override or extend the default run configuration options for the Embedded Debugger.....	61
11.1.3 Embedded Debugger run configuration options for CMSIS-DAP and ST-Link hardware (Flash Device).....	62
11.1.4 Embedded Debugger run configuration options for DAPLink hardware (Flash Device DAPLink).....	63
11.1.5 Run your project.....	63
11.2 Debug your project with the Embedded Debugger.....	64
11.2.1 Add configuration.....	64
11.2.2 Override or extend the default debug configuration options for the Embedded Debugger.....	64
11.2.3 Embedded Debugger debug configuration options.....	65
11.2.4 Start an Embedded Debugger session.....	65
11.2.5 Next steps.....	66
12. Known issues and troubleshooting.....	67
12.1 Known issues.....	67
12.2 Troubleshooting.....	67
12.2.1 Build fails to find toolchain.....	67
12.2.2 Connected development board or debug probe not found.....	68
12.2.3 Out-of-date firmware.....	69

13. Submit feedback.....70

1. Introduction

1.1 Conventions

The following subsections describe conventions used in Arm documents.

Glossary

The Arm Glossary is a list of terms used in Arm documentation, together with definitions for those terms. The Arm Glossary does not contain terms that are industry standard unless the Arm meaning differs from the generally accepted meaning.

See the Arm Glossary for more information: developer.arm.com/glossary.

Typographic conventions

Arm documentation uses typographical conventions to convey specific meaning.

Convention	Use
<i>italic</i>	Citations.
bold	Interface elements, such as menu names. Terms in descriptive lists, where appropriate.
monospace	Text that you can enter at the keyboard, such as commands, file and program names, and source code.
monospace <u>underline</u>	A permitted abbreviation for a command or option. You can enter the underlined text instead of the full command or option name.
<and>	Encloses replaceable terms for assembler syntax where they appear in code or code fragments. For example: <div>MRC p15, 0, <Rd>, <CRn>, <CRm>, <Opcode_2></div>
SMALL CAPITALS	Terms that have specific technical meanings as defined in the <i>Arm® Glossary</i> . For example, IMPLEMENTATION DEFINED , IMPLEMENTATION SPECIFIC , UNKNOWN , and UNPREDICTABLE .



We recommend the following. If you do not follow these recommendations your system might not work.



Your system requires the following. If you do not follow these requirements your system will not work.



You are at risk of causing permanent damage to your system or your equipment, or of harming yourself.



This is important information and needs your attention.



A useful tip that might make it easier, better or faster to perform a task.



A reminder of something important that relates to the information you are reading.

1.2 Other information

See the Arm website for other relevant information.

- [Arm® Developer](#).
- [Arm® Documentation](#).
- [Technical Support](#).
- [Arm® Glossary](#).

2. Extension pack and extensions

The Arm® Keil® Studio Visual Studio Code extension pack, Arm Keil Studio Pack, provides a comprehensive software development environment for embedded systems and IoT software development on Arm-based microcontroller (MCU) devices. Use the Keil Studio extensions contained in the pack to manage your CMSIS solutions (csolution projects), and to create, build, test, and debug embedded applications on your chosen hardware.

The Keil Studio extensions are part of the Arm Keil Microcontroller Development Kit (MDK). MDK is a collection of software tools for developing embedded applications based on Arm Cortex®-M and Ethos™-U processors. MDK gives you the flexibility to work with a command-line interface (CLI) or an integrated development environment (IDE), or by deploying the tools into a continuous integration workflow.

2.1 Arm Keil Studio Pack

The Arm® Keil® Studio Pack is collection of Visual Studio Code extensions. The pack provides the software development environment for embedded systems and IoT software development on Arm-based microcontroller (MCU) devices.

The Keil Studio Pack contains the following extensions:

- Arm CMSIS csolution (Identifier: `arm.cmsis-csolution`): This extension provides support for working with CMSIS solutions (csolution projects).
- Arm Debugger (Identifier: `arm.arm-debugger`): This extension provides access to the Arm Debugger engine for Visual Studio Code by implementing the Microsoft Debug Adapter Protocol (DAP). Arm Debugger supports connections to physical targets, either through external debug probes such as the Arm's ULINK™ family of debug probes, or through on-board low-cost debugging such as ST-Link or CMSIS-DAP based debug probes.
- Arm Device Manager (Identifier: `arm.device-manager`): This extension allows you to manage hardware connections for Arm Cortex®-M based microcontrollers, development boards, and debug probes.
- Arm Environment Manager (Identifier: `arm.environment-manager`): This extension installs the tools that you specify in a manifest file in your environment. For example, you can install Arm Compiler for Embedded, CMSIS-Toolbox, CMake, and Ninja to work with CMSIS solutions.
- Arm Virtual Hardware (Identifier: `arm.virtual-hardware`): This extension allows you to manage Arm Virtual Hardware and run embedded applications on virtual targets. An authentication token is required to access the service. For more details on AVH, read the [overview](#).
- Memory Inspector (Identifier: `eclipse-cdt.memory-inspector`): This extension allows you to analyze and monitor the memory contents in an embedded system. It helps you to identify and debug memory-related issues during the development phase of your project.
- Peripheral Inspector (Identifier: `eclipse-cdt.peripheral-inspector`): This extension uses System View Description (SVD) files to display peripheral details. SVD files provide a standardized way to describe the memory-mapped registers and peripherals of a microcontroller or a System-on-Chip (SoC).



- The Arm Virtual Hardware extension is in development, and is not described in this guide.
 - The Memory Inspector and the Peripheral Inspector are third-party open-source extensions and are not described in this guide.
-

You can also install and use the extensions contained in the pack individually. However, Arm recommends installing the Keil Studio Pack in Visual Studio Code Desktop to quickly set up your environment and start working with an example. See the pack [README file](#) for more details.

3. Intended use cases for the extensions

The intended use cases for the extensions are as follows:

- **Embedded and IoT software development using CMSIS-Packs and csolution projects:** The Common Microcontroller Software Interface Standard (CMSIS) provides driver, peripheral, and middleware support for thousands of MCUs and hundreds of development boards. Using the csolution project format, you can incorporate any CMSIS-Pack based device, board, and software component into your application. For more information about supported hardware for CMSIS projects, go to the [Boards](#) and [Devices](#) pages on keil.arm.com. For information about CMSIS-Packs, go to open-cmsis-pack.org.
- **Enhancement of a pre-existing Visual Studio Code embedded software development workflow:** You can adapt USB device management and embedded debugging to other project formats (for example CMake) and toolchains without additional overhead. This use case requires familiarity with Visual Studio Code to configure tasks. See the individual extensions for more details.

4. Get started with an example project

Set up your environment and start working with an example.



This section describes working with example csolution or μ Vision projects that you can download from keil.arm.com. You can also create csolution projects from scratch, or convert your existing μ Vision projects to csolution format. For more information, see [Create a csolution project](#) and [Convert a Keil \$\mu\$ Vision project to a csolution project](#).

We recommend installing the Keil Studio Pack in Visual Studio Code Desktop as explained in the [README file](#). The pack installs all the Keil® Studio extensions, as well as the Red Hat YAML, Microsoft C/C++, and Microsoft C/C++ Themes extensions.

Then:

- Run the setup process using an [example csolution project](#) from keil.arm.com (recommended).
- Download a [Keil \$\mu\$ Vision *.uvprojx project](#) from keil.arm.com and convert it to a csolution (alternative).

The examples available on keil.arm.com are shipped with a Microsoft vcpkg manifest file (`vcpkg-configuration.json`). The [Environment Manager extension](#) uses the manifest file to acquire and activate the tools that you need to work with csolution projects using Microsoft vcpkg.

Each example also comes with a `tasks.json` file and a `launch.json` file to build, run, and debug the project.

The tools installed by default are:

- Arm® Compiler for Embedded.
- CMSIS-Toolbox.
- CMake and Ninja.

[Finalize the setup of your development environment](#). If you do not want to use Microsoft C/C++ and Microsoft C/C++ Themes, you can install and set up the [clangd](#) extension instead to add smart features to your editor.

When you are ready:


- [Build the example project](#).
- Explore what you can do with the CMSIS csolution extension:
 - [Set a context](#)
 - [Look at the Solution outline](#)
 - [Install CMSIS-Packs and select software components from packs](#)
- [Connect your board and run the example on the board](#).

- [Start a debug session.](#)
- [Check the serial output.](#)

4.1 Import a csolution example

Import a csolution example in Visual Studio Code, or download a zip file that contains the csolution.

Procedure

1. Go to keil.arm.com.
2. Click the **Hardware** menu and select **Boards**.
3. Search for your board and select it in the **Suggested Boards** list.
4. Find a project in the **Projects** tab.
The `keil_studio` compatibility label indicates that the example is compatible with Keil® Studio Cloud and the Keil Studio Visual Studio Code extensions.
5. Move your cursor over **Get Project**, and then click **Open in Keil Studio for VS Code** to import the csolution example.
Alternatively, you can download a zip file that contains the csolution with the **Download .zip** option.
6. In the “Open Visual Studio Code?” dialog box that opens at the top of your browser window, click **Open Visual Studio Code**.
7. In the “Allow ‘Arm Keil Studio Pack’ extension to open this URI?” dialog box that opens in Visual Studio Code, click **Open**.
8. Choose a folder to import the project and click **Select as Unzip Destination**.
9. In the “Would you like to open the unzipped folder, or add it to the current workspace?” dialog box, click **Open**.
10. Confirm that the [Environment Manager extension](#) can automatically activate the workspace and download the tools specified in your `vcpkg-configuration.json` file.
If there are missing CMSIS-Packs, a pop-up message displays in the bottom right-hand corner with the following message: “Solution [solution-name] requires some packs that are not installed”.
11. Click **Show Missing Packs** to open the **PROBLEMS** view.
12. Right-click the error in the **PROBLEMS** view and select **Install missing pack**. If there are several packs missing, use **Install all missing packs**.
You must activate a license to be able to use tools such as Arm® Compiler, Arm Debugger, or Fixed Virtual Platforms in your toolchain. If you have not activated your license after installing the pack, a pop-up message displays in the bottom right-hand corner. See [Activate your license to use Arm tools](#) for more details on licensing.
13. Click **Explorer** .
A `vcpkg-configuration.json` is available. The file records the `vcpkg` artifacts, such as the compiler toolchain version, that you need to work with your projects. You do not need to do anything to install the tools. Microsoft `vcpkg` and the Environment Manager extension take care of the setup. See [Tools installation with Microsoft vcpkg](#).


A `tasks.json` file and a `launch.json` file are also available in the `.vscode` folder. Visual Studio Code uses the `tasks.json` file to build and run the project, and the `launch.json` file for debugging.


4.2 Download and convert a Keil µVision example

Download a Keil® µVision® *.uvprojx project from keil.arm.com and convert it to a csolution. Note that conversion does not work with Arm® Compiler 5 projects. You can download Arm Compiler 5 projects from the website, but you cannot use them with the extensions. Only Arm Compiler 6 projects can be converted. As a workaround, you can update Arm Compiler 5 projects to Arm Compiler 6 in Keil µVision, then convert the projects to csolutions in Visual Studio Code. For more help and information on converting to Arm Compiler 6, see the [Migrate Arm Compiler 5 to Arm Compiler 6 application note](#) and the [Arm Compiler for Embedded Migration and Compatibility Guide](#).

Procedure

1. Go to [keil.arm.com](https://www.keil.arm.com).
2. Connect your board over USB and click **Detect Connected Hardware** in the bottom right-hand corner.
3. Select the device firmware for your board in the dialog box that displays at the top of the window, and then click **Connect**.
4. Click the **Board** link in the pop-up message that displays in the bottom right-hand corner. The page for the board opens. Example projects are available in the **Projects** tab.
5. Look for an example with a µvision compatibility label.
6. Move your cursor over the **Get Project** button for the project that you want to use and click **Download .zip** to download the Keil µVision *.uvprojx example.
7. Unzip the example and open the folder in Visual Studio Code.
8. Right-click the *.uvprojx and select **Convert µVision Project to Csolution** from the **Explorer**.

Alternatively, if you are starting from an empty workspace, you can click **CMSIS**  in the Activity Bar to open the **CMSIS** view. Then choose one of the following two options:

- Click **Convert a µVision Project** and open your *.uvprojx file to convert it
- Move your cursor over the **Solution outline**, click **More Actions** , then select **Convert µVision Project to Csolution** and open your *.uvprojx file to convert it

The conversion starts immediately.


A dialog box displays. You can carry out the following tasks:

- Open the solution in a new workspace (**Open** option)
- Open the solution in a new window and new workspace (**Open project in new window** option)

You can also run the **CMSIS: Convert μ Vision project to Csolution** command from the Command Palette. In that case, select the *.uvprojx that you want to convert on your machine and click **Select**.

If there are conversion errors, check the uv2csolution.log file available.

9. Confirm that the [Environment Manager extension](#) can automatically activate the workspace and download the tools specified in your vcpkg-configuration.json file.
10. Check the **OUTPUT** tab (**View > Output**). Select **μ Vision to Csolution Conversion** in the drop-down list on the right-hand side of the **OUTPUT** tab.
If there are missing CMSIS-Packs, a pop-up message displays in the bottom right-hand corner with the following message: "Solution [solution-name] requires some packs that are not installed".
11. Click **Show Missing Packs** to open the **PROBLEMS** view.
12. Right-click the error in the **PROBLEMS** view and select **Install missing pack**. If there are several packs missing, use **Install all missing packs**.
You must activate a license to be able to use tools such as Arm® Compiler, Arm Debugger, or Fixed Virtual Platforms in your toolchain. If you have not activated your license after installing the pack, a pop-up message displays in the bottom right-hand corner. See [Activate your license to use Arm tools](#) for more details on licensing.

The *.cproject.yml and *.csolution.yml files are available next to the *.uvprojx in the **Explorer** .

A vcpkg-configuration.json file is available. The file records the vcpkg artifacts, such as the compiler toolchain version, that you need to work with your projects. You do not need to do anything to install the tools. Microsoft vcpkg and the Environment Manager extension take care of the setup. See [Tools installation with Microsoft vcpkg](#).

A tasks.json file and a launch.json file are also available in the .vscode folder. Visual Studio Code uses the tasks.json file to build and run the project, and the launch.json file for debugging.

4.3 Finalize the setup of your development environment

To finalize the setup of your development environment:

- [Configure an HTTP proxy](#). This step is required only if you are working behind an HTTP proxy.
- The pack installs all the Keil® Studio extensions, as well as the Red Hat YAML, Microsoft C/C++, and Microsoft C/C++ Themes extensions. If you do not want to use the Microsoft C/C++ and Microsoft C/C++ Themes extensions, you can disable them in Visual Studio Code and install and set up the [clangd](#) extension instead.

4.3.1 Configure an HTTP proxy (optional)

This step is required only if you are working behind an HTTP proxy. You can configure the tools to use an HTTP proxy using the following standard environment variables:

- `HTTP_PROXY`: Set to the proxy used for HTTP requests
- `HTTPS_PROXY`: Set to the proxy used for HTTPS requests
- `NO_PROXY`: Set to include at least `localhost, 127.0.0.1` to disable the proxy for internal traffic, which is required for the extension to work correctly

4.3.2 clangd (alternative)

Install the clangd extension. Similarly to the Microsoft C/C++ and Microsoft C/C++ Themes extensions, clangd adds smart features such as code completion, compile errors, and go-to-definition to your editor.



The clangd extension requires the clangd language server. If the server is not found on your PATH, add it with the **clangd: Download language server** command from the Command Palette. Read the clangd extension `README` file for more information.

After clangd has been installed, no extra setup is needed. The CMSIS csolution extension generates a `compile_commands.json` file for each project in a solution whenever a csolution file changes or when you change the context of a solution (**Target** and **Build** types). A `.clangd` file is kept up to date for each project in the solution. The `.clangd` file is used by the clangd extension to locate the `compile_commands.json` files and to enable IntelliSense. See the [clangd documentation](#) for more details.

To turn off the automatic generation of the `.clangd` file and `compile_commands.json` file:

1. Open the settings:
 - On Windows or Linux, go to **File > Preferences > Settings**.
 - On macOS, go to **Code > Settings > Settings**.
2. Find the **Cmsis-csolution: Auto Generate Clangd File** and **Cmsis-csolution: Auto Generate Compile Commands** settings. Clear their checkboxes.

4.4 Build the example project

Check that your example project builds. You can build your project from the **Explorer** using **Build**, from the **Solution outline**, or from the Command Palette.

Procedure

1. Build the project:

- From the **Explorer**:

- a. Go to the **Explorer** view .
- b. Right-click the *.csolution.yml file and select **Build**.

These options are also available in the right-click menu:

- **Clean**: cleans the output directories for the active solution
- **Rebuild**: cleans the output directories before building the cproject

- From the **Solution outline**:

- a. Click **CMSIS**  in the Activity Bar.

The **Solution outline** opens.

- b. Move your cursor over the **Solution outline**.

Build icons are available at the solution or project level.

- c. Click **Build** .

The **Clean** and **Rebuild** options are also available with **More Actions** .

You can configure a build task in a `tasks.json` file to customise the behaviour of the build button. A `tasks.json` file is provided for all the examples available on [keil.arm.com](https://www.keil.arm.com). See [Configure a build task](#) for more details.

- From the Command Palette: **Build**, **Clean**, and **Rebuild** can also be triggered from the Command Palette with the **CMSIS: Build**, **CMSIS: Clean**, and **CMSIS: Rebuild** commands.

2. Check the **TERMINAL** tab to find where the ELF file (`.axf`) was generated.

4.5 Choose a context for your csolution

A context is the combination of a target type (build target) and build type (build configuration) for a particular project in your solution.

You can choose between `Debug` or `Release` for the build type.

Read [Set a context for your csolution](#) for more details.

4.6 Look at the Solution outline

The **Solution outline** presents the content of your solution in a tree view.

Read [Use the Solution outline](#) for more details.

4.7 Install CMSIS-Packs and select software components from packs

CMSIS-Packs contain reusable software components that you can use to quickly build projects. CMSIS-Packs are listed in the `csolution.yml` files of solutions. The CMSIS csolution extension seamlessly handles the installation of packs to your pack cache.

See [CMSIS-Packs](#) and [Install CMSIS-Packs](#) for more details.


The **Software Components** view shows all the software components selected in the active project of your solution.

Read [Manage software components](#) for more details.

4.8 Connect your board

Connect your board. See [Supported hardware](#) for more details on the development boards, MCUs, and debug probes supported by the extensions.

Procedure

1. Click **Device Manager**  in the Activity Bar to open the Device Manager extension.
2. Connect your board to your computer over USB.

The board is detected and a pop-up message displays.



3. Click **OK** in the pop-up message to use the hardware.

Your board is now ready to be used to run and debug a project.

4.9 Run the csolution on your board

Run the csolution project on your board.

Procedure

1. Click **CMSIS**  in the Activity Bar.
The **Solution outline** opens.
2. Move your cursor over the **Solution outline**.
Run icons are available at the solution level.
3. Click **Run** .



You can configure a run task in a `tasks.json` file to customise the behaviour of the run button. A `tasks.json` file is provided for all the examples available on [keil.arm.com](https://www.keil.arm.com). See [Run your project on your hardware with Arm Debugger](#) for more details.

4. If you are using a device with multiple cores and you did not specify a "processorName" in the `launch.json` file, and you do not have the CMSIS csolution extension installed, then you must select the appropriate processor for your project in the **Select a processor** drop-down list that displays at the top of the window.
The project is run on the board.
5. Check the **TERMINAL** tab.

4.10 Start a debug session

Start a debug session.

Procedure

1. Click **CMSIS**  in the Activity Bar.
The **Solution outline** opens.
2. Move your cursor over the **Solution outline**.
Debug icons are available at the solution level.
3. Click **Debug** .
You can configure a launch configuration in a `launch.json` file to customise the behaviour of the debug button. A `launch.json` file is provided for all the examples available on keil.arm.com. See [Debug your project with Arm Debugger](#) for more details.
4. If you are using a device with multiple cores and you did not specify a "processorName" in the `launch.json` file, and you do not have the CMSIS csolution extension installed, then you must select the appropriate processor for your project in the **Select a processor** drop-down list that displays at the top of the window.
The **RUN AND DEBUG** view displays and the debug session starts. The debugger stops at the "main" function of your project.
5. Check the **DEBUG CONSOLE** tab to see the debugging output.

Next steps

Look at the [Visual Studio Code documentation](#) to learn more about the debugging features available in Visual Studio Code.

5. Arm Environment Manager extension

The Arm® Environment Manager extension allows you to manage environment artifacts, such as a compiler toolchain, using Microsoft vcpkg. The extension uses a vcpkg manifest file to acquire and activate the artifacts that you need to set up your development environment.

The artifacts for your project are stored in the `vcpkg-configuration.json` file in the project source code. This means that the same tools are available to everyone using the project.

If you do not want to use vcpkg, you can install the artifacts for your project by downloading and installing the CMSIS-Toolbox. For more information see the [CMSIS-Toolbox](#) installation instructions in the Open-CMSIS-Pack documentation.

The Environment Manager extension also includes features to help you license your tools. See [Activate your license to use Arm tools](#) for more details.

5.1 Tools installation with Microsoft vcpkg

Arm uses Microsoft vcpkg to set up your environment. Microsoft vcpkg works in combination with the Environment Manager extension installed with the pack for the setup.

Each official Arm example project is shipped with a manifest file (`vcpkg-configuration.json`). The manifest file records the vcpkg artifacts that you need to work with your projects. An artifact is a set of packages required for a working development environment. Examples of relevant packages include compilers, linkers, debuggers, build systems, and platform SDKs.

For more information on vcpkg, see the official [Microsoft vcpkg](#) documentation. See also the [Microsoft vcpkg-tool repository](#) for more details on artifacts.

5.2 Check the tools installed with Microsoft vcpkg

The `vcpkg-configuration.json` manifest file instructs Microsoft vcpkg to install the artifacts. For example:

```
"requires": {  
  "arm:tools/open-cmsis-pack/cmsis-toolbox": "^2.0.0-0",  
  "arm:compilers/arm/armclang": "^6.20.0",  
  "microsoft:tools/kitware/cmake": "^3.25.2",  
  "microsoft:tools/ninja-build/ninja": "^1.10.2"  
}
```

The artifacts installed with this example manifest file are cmsis-toolbox, armclang (Arm Compiler for Embedded), cmake, and ninja.

Go to the **OUTPUT** tab (**View** > **Output**) and select the **vcpkg** category in the drop-down list to see what has been installed. By default, Microsoft vcpkg installs the tools in the Visual Studio Code application directory.

After Microsoft vcpkg has been activated for a project, any terminal that you open in Visual Studio Code has all the tools added to the PATH by default (Arm Compiler for Embedded, CMSIS-Toolbox, CMake, and Ninja). This process allows you to run the different [CMSIS-Toolbox tools](#) such as `cpackget`, `cbuildgen`, `cbuild`, or `csolution`.

5.3 Modify the manifest file

To add or change tools in your environment, modify the artifacts contained in the manifest file of your project.

The artifacts provided by Arm are listed on the [Arm tools available in vcpkg](#) page on keil.arm.com.

Copy the code snippets for the artifacts that you want to install and paste them in the `vcpkg-configuration.json` manifest file of your project in the `"requires":` section, then save the file. The newly added or updated artifacts are automatically downloaded and activated.

5.4 vcpkg activation options

Several options are available to activate, deactivate, or reactivate your environment with Microsoft vcpkg and update your vcpkg registries. If you are using an example from keil.arm.com or if you created a `csolution` project from scratch from the **Create New CMSIS Solution** view, your environment is activated by default.

Procedure

1. From the **Explorer**, open your workspace.
2. Right-click the `vcpkg-configuration.json` file.
Depending on the activation status of your environment and the **Environment Manager** settings selected, the following options are available:
 - **Activate environment:** Activate the environment. This option is available only if you previously deactivated your environment or if you modified the **Activate On Config Creation** or **Activate On Workspace Open** settings for the **Environment Manager**. Tools are available on the PATH.
 - **Deactivate environment:** Deactivate the active environment. Tools are also removed from the PATH.
 - **Reactivate environment:** Deactivate and activate the environment (for example, if you have changed your vcpkg configuration).
 - **Update Tool Registry:** Check for fresh artifacts published in the registries.

The same options are available when you click **Arm Tools** in the status bar. With the **View Log** option, you can also open the **OUTPUT** tab to check what tools have been installed. The **Configure Arm Tools Environment** option opens the visual editor. See [Use the Environment Configuration visual editor](#).

5.5 Use vcpkg from the command line

You can also use vcpkg from the command line to create reproducible tool installations.

Information about vcpkg is available at vcpkg.io and at [Microsoft Learn](https://learn.microsoft.com/en-us/vcpkg/).

The Arm Developer Learning Paths also have an example scenario that shows you how to install and initialize vcpkg, and how to create and use the configuration file. See [Install tools on the command line using vcpkg](#).

5.6 Confirm automatic activation

If you open a new workspace, duplicate an existing workspace, or open an example project from keil.arm.com, the Environment Manager extension automatically activates the workspace and downloads the tools specified in your `vcpkg-configuration.json` file. A dialog box opens, allowing you to confirm the activation. You can open the `vcpkg-configuration.json` file to see what will be installed.

You can also change the automatic activation settings at any time from **File > Preferences > Settings > Workspace > Extensions > Environment Manager**.

5.7 Use the Environment Configuration visual editor

As an alternative to editing the `vcpkg-configuration.json` manifest file directly, you can use the **Environment Configuration** visual editor to add or change tools in your environment.

Procedure

1. Right-click anywhere in the **Explorer** view.
2. From the menu that opens, select **Show Environment Configuration**.

The **Environment Configuration** editor opens.

You can also open the editor by clicking **Arm Tools** in the status bar and selecting the **Configure Arm Tools Environment** option in the drop-down list that displays at the top of the window.

3. Use the drop-down lists to install or update the tools that you want to use in your environment.
4. If **Auto Save** is not enabled (**File > Auto Save**), save your settings.

The newly added or updated tools are automatically downloaded and activated. You can view details of what has been installed in the **OUTPUT** tab (**View > Output**).

6. Arm CMSIS csolution extension

The Arm CMSIS csolution extension provides support for working with CMSIS solutions (csolution projects). The extension manages the information needed to create your csolution projects.

With the CMSIS csolution extension, you can carry out the following tasks:

- [Set a context for your csolution](#)
- [Use the Solution outline](#)
- [Install CMSIS-Packs](#)
- [Manage software components](#)

You can also:

- [Create a csolution project from scratch](#)
- [Convert a Keil \$\mu\$ Vision project to a csolution project](#)
- [Configure a build task](#)
- [Initialize your csolution project](#)
- [Use the CMSIS csolution API](#)



For information on working with existing example projects from keil.arm.com instead of creating new projects from scratch, see [Get started with an example project](#).

6.1 CMSIS solutions

A solution is a container used to organize related projects that are part of a larger application and that can be built separately. See [Project Setup for Related Projects](#) for a solution example.

Solutions are defined in YAML format using `*.csolution.yml` files. A `*.csolution.yml` file defines the complete scope of an application and the build order of the projects that the application contains. Individual projects are defined using `*.cproject.yml` files. A `*.cproject.yml` file defines the content of an independent build. Each project corresponds to one binary file (build artifact).




You can edit the `*.csolution.yml` and `*.cproject.yml` files of a solution manually. The Keil Studio Pack includes the Red Hat YAML extension and the CMSIS csolution extension uses YAML schemas to make the editing of these files easier. See the [vscode-yaml repository](#) for more information on the extension.

See the [Build Overview](#) of the CMSIS-Toolbox documentation and the [Project Examples](#) to understand how solutions and projects are structured. For more information on csolution project files, see [CMSIS Solution Project File Format](#).

6.2 Set a context for your csolution

Look at your csolution contexts. A context is the combination of a target type and build type for a particular project in your solution.

Procedure

1. Click **CMSIS**  in the Activity Bar to open the **CMSIS** view.
2. Choose one of the following options:
 - Click  in the **Solution outline** header
 - Select **CMSIS: Select a Context for the Solution** from the Command Palette
 - Click  in the status bar.

The **CMSIS Solution Active Context** view opens.

3. Look at the available contexts for the csolution. You can change the target type, the projects included in the build, and the build type. You can also change the run configuration and the debug configuration, or add new configurations.
 - **Solution:** The name of the active csolution.
 - **Target:** Select a **Target Type** to specify the hardware to use to build the solution. Some examples are also compatible with Arm® Virtual Hardware (AVH) targets, in which case more options are available. For more details on AVH, read the [overview](#).

Click **Edit targets in the csolution.yml** to specify your target types by editing the YAML file directly.

- **Projects:** The project or projects included in the build. If you have multiple projects in your solution, you can select the projects to include here.
- **Build Type:** The build configuration. A build configuration allows you to configure each target type towards specific testing. You can set different build types for different projects in your solution. You can create your own build types as required by your application, but two commonly used examples are **Debug** for a full debug build of the software for interactive debugging, or **Release** for the final code deployment to the systems.
- **Run Configuration** and **Debug Configuration:** Choose a run configuration and a debug configuration to use for your solution from the drop-down list. You can also:
 - Move your mouse over an entry in the list and click the pen icon to edit an existing configuration
 - Click **+ Add new** to add a new configuration



You can define run configurations and debug configurations by editing the `tasks.json` file and the `launch.json` file directly. Alternatively, you can use the visual editor to define your run and debug configurations. For more

information on running and debugging your projects, see [Arm Debugger Extension](#).

4. Click **Edit cproject.yml** next to a project in the **Projects** list to open the <project-name>.cpjproject.yml file. YAML syntax support helps you with editing.
5. Go to the **PROBLEMS** tab and check for errors.
6. Open the main.c file and check the IntelliSense features available. Read the Visual Studio Code documentation on [IntelliSense](#) to find out about the different features.

Next steps

A *.cpj file is generated automatically for the selected context each time that you update the <project-name>.csolution.yml file.

You can optionally turn off the automatic generation of cpj files.

1. Open the settings:
 - On Windows or Linux, go to **File > Preferences > Settings**.
 - On macOS, go to **Code > Settings > Settings**.
2. Find the **Cmsis-csolution: Auto Generate Cprj** setting and clear its checkbox.

6.3 Use the Solution outline

The **Solution outline** presents the content of your solution in a tree view.



Click **CMSIS**  in the Activity Bar to open the **CMSIS** view. The **Solution outline** displays on the left.

The **Solution outline** shows the cprojects included in the solution. Each cproject file contains configuration settings, source code files, build settings, and other project-specific information. The extension uses these settings and files to manage and build a software project for a board or device.

You can have the following details for a cproject:


- **Groups:** Groups are a way to structure code files into logical blocks.
- **Components:** All the software components selected for the cproject. Components are sorted by component class (Cclass). Code files, user code templates, and APIs from selected components display under their parent components. Click the files, templates, or APIs to open them in the editor.
- **Layers:** The clayer file, *.clayer.yml, defines the software layers for the cproject. A software layer is a set of source files, preconfigured software components, and configuration files. The clayer file can be used by multiple projects. The software components used by each layer in the cproject appear in the tree view.

The **Solution outline** label displays the name of your active solution. When you move your cursor over the label, you can choose one of the following actions:

- **Build:** Click  to build all the cprojects included in the active solution. You can also build each cproject individually. The **Solution outline** displays the selected build type next to each cproject.
- **Run:** Click  to run the csolution on your hardware. Select a run task in the drop-down list that displays at the top of the window.







The **Run** option is also available for each individual project in the csolution.

- **Debug:** Click  to debug the csolution. Select a debug configuration in the drop-down list that displays at the top of the window.



The **Debug** option is also available for each individual project in the csolution.

- **Open Csolution File:** Open the main `csolution.yml` file. When you move your cursor over a project or a layer, an **Open File** option is also available.
- **Select a Context for the Solution:** Click  to [set a context for your solution](#).
- **Collapse All:** Click  to close all the entries in the outline.
- **More Actions :**
 - **Clean:** Clean the output directories for the active solution
 - **Rebuild:** Clean the output directories before building the cprojects
 - **Convert µVision Project to Csolution:** Convert an existing µVision project to a csolution project
 - **New CMSIS Solution:** Create a csolution project from scratch
 - **Open CMSIS Solution:** Select the active solution. If you have several solutions in your workspace, this option allows you to switch from one solution to another. The same option is available from the **Explorer** when you right-click the `csolution.yml` file. Select a solution in the drop-down list that displays at the top of the window.

A build type and target display next to each cproject. You can check which software components are selected for each cproject. Click  to open the **Software Components** view.

Press **Ctrl+F** (Windows) or **Cmd+F** (macOS) to look for an element in the **Solution outline**.

The `*.csolution.yml`, `*.cproject.yml`, and `*.clayer.yml` file formats are described in the [Open-CMSIS-Pack documentation](#).

6.4 CMSIS-Packs

CMSIS-Packs offer you a quick and easy way to create, build, and debug embedded software applications for Cortex®-M devices.

CMSIS-Packs are a delivery mechanism for software components, device parameters, and board support. A CMSIS-Pack is a file collection that might include:

- Source code, header files, and software libraries - for example, RTOS, DSP, and generic middleware
- Device parameters, such as the memory layout or debug settings, along with startup code and Flash programming algorithms
- Board support, such as drivers, board parameters, and descriptions for debug connections
- Documentation and source code templates
- Example projects that show you how to assemble components into complete working systems

CMSIS-Packs are developed by various silicon and software vendors, covering thousands of different boards and devices. You can also use them to enable life-cycle management of in-house software components.

See the [Open-CMSIS-Pack documentation](#) for more details.

Discover new CMSIS-Packs on keil.arm.com/packs. Snippets that you can copy to add a pack to your `csolution.yml` file and to install packs with `cpackget add` are available for each pack.

6.5 Install CMSIS-Packs

If you started from an example available on keil.arm.com, then the CMSIS-Packs you need for the example are already listed in the `csolution.yml` file under the `packs` key. The CMSIS csolution extension scans your pack cache and offers to install any missing packs. See [Install missing CMSIS-Packs](#) for more details.


If you need to add CMSIS-Packs in your example solution, or if you are creating a solution from scratch, then you can explore the available CMSIS-Packs on keil.arm.com. See [Explore the available CMSIS-Packs](#) for more details.

See also [Support for packs](#) to understand the difference between public and private packs and how you can manage packs from the command line.

6.5.1 Install missing CMSIS-Packs

Install the missing CMSIS-Packs for your solution.

Procedure

1. Open the `*.csolution.yml` file for your csolution project from the **Explorer** view .
The required packs are listed under the `packs` key of the `csolution.yml` file. If one or more CMSIS-Packs are missing, errors display in the **PROBLEMS** view and a pop-up message displays in the bottom right-hand corner with the message "Solution [solution-name] requires some packs that are not installed".
2. Click **Install**.
Alternatively, right-click the error in the **PROBLEMS** view and select **Install missing pack**. If there are several packs missing, use **Install all missing packs**.

You can also install missing packs with the **CMSIS: Install required packs for active solution** command from the Command Palette.

6.5.2 Explore the available CMSIS-Packs

Explore the available CMSIS-Packs on [keil.arm.com](https://www.keil.arm.com) and install them.

Procedure

1. Go to the CMSIS-Packs page on [keil.arm.com](https://www.keil.arm.com).
2. Search for a pack and select it in the **Results** list. For example, type `wolfSSL`.
3. Copy the `packs` snippet and update the `packs` key of your `csolution.yml` file in Visual Studio Code.

Figure 6-1: wolfSSL example

Add to CMSIS Solution

```
packs:  
  - pack: wolfSSL::wolfSSL@5.6.6
```



Add with cpackget

```
> cpackget add wolfSSL::wolfSSL@5.6.6
```



Download

 **wolfSSL 5.6.6**

4. Install the pack by clicking **Install** in the pop-up message that displays in the bottom right-hand corner.

6.6 Manage software components

The **Software Components** view shows all the software components selected in the active project of a CMSIS solution.

From this view you can see all the component details, called attributes in the [Open-CMSIS-Pack documentation](#).



You can also carry out the following tasks:

- Modify the software components to include in the project, and manage the dependencies between components for each target type defined in your solution, or for all the target types at once
- Build the solution using different combinations of pack and component versions, and different versions of a toolchain

6.6.1 Open the Software Components view

Describes how to open the **Software Components** view.

Procedure

1. Click **CMSIS**  in the Activity Bar to open the **CMSIS** view.
2. Move your cursor over the **Solution outline**, and then click **Manage software components** .

Results

The **Software Components** view opens.

The default view displays the components available from the packs listed in your solution (**Software packs: Solution** drop-down list and **All** toggle button).


You can use the **Search** field to search the list of components.

With the **Project** drop-down list, select the project for which you want to modify software components.

With the **Target** drop-down list, select **All Targets** or a specific target type to modify software components for all the target types in your solution at once, or for a specific target only.

With the **Software packs** drop-down list, you can filter on the components available from the packs listed in your solution, or display the components from all the packs available in the CMSIS ecosystem.

Figure 6-2: The 'Software Components' view showing all the components available from the packs listed in a solution

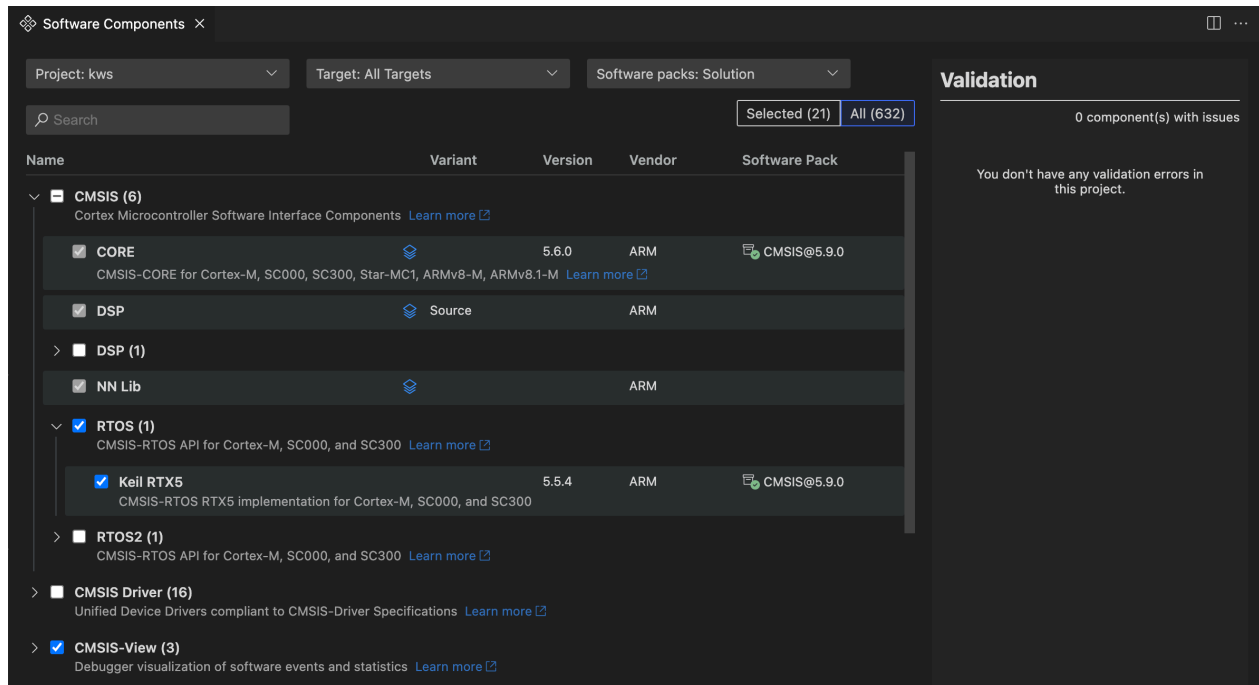


The CMSIS-Pack specification states that each software component should have the following attributes:

- Component class (Cclass): A top-level component name (for example, **CMSIS**)
- Component group (Cgroup): A component group name (for example, **CORE** for the **CMSIS** component class)
- Component version (Cversion): The version number of the software component

Optionally, a software component might have these additional attributes:

- Component subgroup (Csub): A component subgroup that is used when multiple compatible implementations of a component are available (for example, **Keil RTX5** under **CMSIS > RTOS2**)
- Component variant (Cvariant): A variant of the software component that is typically used when the same implementation has multiple top-level configurations, like **Library** for **Keil RTX5**
- Component vendor (Cvendor): The supplier of the software component (for example, **ARM**)
- Bundle (Cbundle): Allows you to combine multiple software components into a software bundle. Bundles have a different set of components available. All the components in a bundle are compatible with each other but not with the components of another bundle. For example, **ARM Compiler** for the **Compiler** component class.

Layer icons  indicate which components are used in layers. In the current version, layers are read-only, so you cannot select or clear them from the **Software Components** view. Click the layer icon of a component to open the *.clayer.yml file or associated files.


Documentation links are available for some components at the class, group, or subgroup level. Click the **Learn more** link of a component to open the related documentation.

6.6.2 Modify the software components in your project

You can add components from all the packs available, not just the packs that are already selected for a project.

Procedure

1. In the **Project** drop-down list, select the project for which you want to modify software components.
2. In the **Target** drop-down list, select a specific target type, or, if you want to modify all the target types at once, select **All Targets** (note that some examples have only one target).
3. In the **Software packs** drop-down list, you can filter on the components available from the packs listed in your solution (**Solution** option), or display the components from all the packs available in the CMSIS ecosystem (**All packs** option).
4. Check that the **All** toggle button is selected to display all the components available, or switch to **Selected** to display only the components that are already selected.
5. Use the checkboxes to select or clear components as required. For some components, you can also select a vendor, variant, or version.
The `cproject.yml` file is automatically updated.
6. Manage the dependencies between components and solve validation issues from the **Validation** panel.

Issues are highlighted in red and have an exclamation mark icon  next to them. You can remove conflicting components from your selection or add missing component dependencies from a suggested list.

7. If there are validation issues, move your cursor over the issues in the **Validation** panel to get more details. Click the proposed fixes to find the components in the list. In some cases, you might have to choose between different fix sets. Select a fix set in the drop-down list, make the required component choices, and then click **Apply**.

If a pack is missing in the solution, a “Component’s pack is not included in your solution” message displays in the **Validation** panel. An error also displays in the **PROBLEMS** view. See [Install CMSIS-Packs](#) for information on how to install CMSIS-Packs.

There can be other issues such as:

- A component that you selected is incompatible with the selected hardware and toolchain.
- A component that you selected has dependencies which are incompatible with the selected hardware and toolchain.
- A component that you selected has unresolvable dependencies. In such cases, you must remove the component. Click **Apply** from the **Validation** panel.

6.6.3 Undo changes



In the current version, you can undo changes from the **Source Control** view or by directly editing the `cproject.yml` file.

6.7 Create a csolution project

Create a csolution project from scratch.


Procedure

1. To create a solution, either:

- Click **CMSIS**  in the Activity Bar to open the **CMSIS** view. Then:
 - If you are starting from an empty workspace, click **Create a New Solution**.
 - If you already have a solution opened in your workspace and want to create a new one in the same workspace, move your cursor over the **Solution outline**, and then click **More Actions**  > **New CMSIS Solution**.
- Go to the **File** menu and select **New File...**, then select **CMSIS Solution** in the drop-down list that opens at the top of the window.

The **Create New CMSIS Solution** view opens.

2. Click the **Target Board** drop-down list. Enter a search term, and then select a board. A picker shows you the details of the board that you selected.

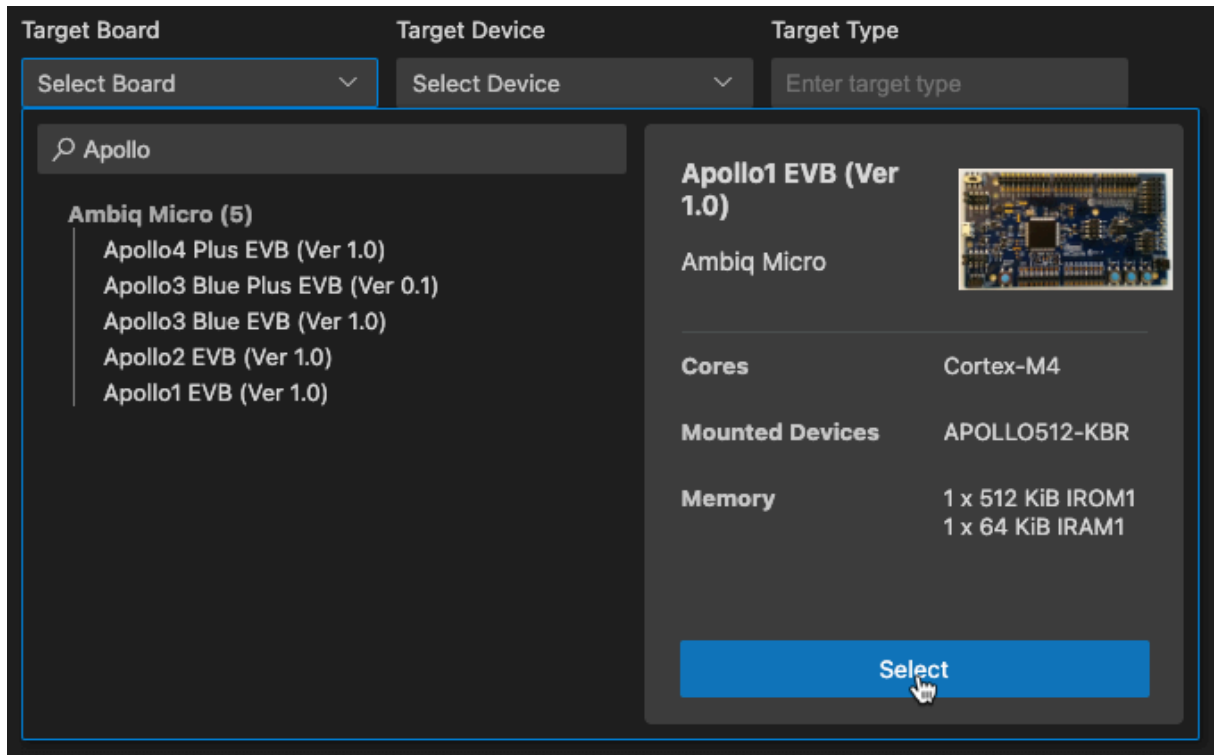

3. Click **Select**.

The **Target Device** drop-down list and **Target Type** field are filled in by default with the name of the device mounted on the board that you selected.

Alternatively, you can directly select a device in the **Target Device** drop-down list.

4. In the **Target Type** field, you can customize the name of the target hardware that is used to deploy the solution. The **Target Type** displays in the **CMSIS Solution Active Context** view and is set in the `<solution_name>.csolution.yml` file (`target-types: - type:`).
5. Select one of the following options from the **Templates and Examples** drop-down list: Note that the option or options available depend on the board or device that you selected.
 - Create a blank solution
 - Create a TrustZone solution. TrustZone is a hardware-based security feature that provides a secure execution environment on Arm-based processors. It allows the isolation of secure and non-secure zones, enabling the secure processing of sensitive data and applications. If the board or device that you selected is compatible, you can decide if your solution should use the TrustZone technology and define which project in the solution should use secure or non-secure zones.
 - Use an example project as a starting point
6. For blank and TrustZone solutions only, configure the projects in your solution:
 - If you selected `Blank solution`: One project is added for each processor in the target hardware. You can change the project names. You can decide to add `secure` or `non-secure` zones with the **TrustZone** drop-down list if the board or device is compatible. By default, TrustZone is `off`.

- If you selected `TrustZone` solution: Two projects (a secure project and a non-secure project) are added for each processor in the target hardware that supports TrustZone. You can change the project names. You can also change the zones (`secure` or `non-secure`) in the **TrustZone** drop-down list, or remove TrustZone by selecting `off`.
7. Click **Add Project** to add projects to your solution and configure them. For TrustZone, you can add as many `secure` or `non-secure` projects as you need for a particular processor.
 8. For blank and TrustZone solutions only, select a compiler: **Arm Compiler 6**, **GCC**, or **LLVM**.
 9. You can change the name for your solution in the **Solution Name** field.
 10. Click **Browse** next to the **Solution Location** field and choose where to store the files of the solution using the system dialog box that opens.
 11. With the **Initialize Git repository** checkbox, you can initialize the solution as a Git repository. Clear the checkbox if you do not want to turn your solution into a Git repository.
 12. Click **Create**.
The extension creates the solution. Examples available only in `*.uvprojx` format are converted automatically. If there are conversion errors, check the `uv2csolution.log` file available.

A dialog box displays. You can carry out the following tasks:

- Open the solution in a new workspace (**Open** option)
 - Open the solution in a new window and new workspace (**Open project in new window** option)
 - Add the solution to the current workspace (**Add project to vscode workspace** option)
13. Select one of the options.
The extension also generates a `vcpkg-configuration.json` file with the tools that you need to set up your development environment. An **Arm Environment Activation** dialog box displays.
 14. Confirm that the [Environment Manager extension](#) can automatically activate the workspace and download the tools specified in your `vcpkg-configuration.json` file.
 15. Check that the files for the solution have been created:
 - A `vcpkg-configuration.json` file
 - A `<solution_name>.csolution.yml` file
 - One or more `<project_name>.cproject.yml` files, each available in a separate folder
 - A `main.c` template file for each project

Next steps

Explore the autocomplete feature available to edit the `csolution.yml` and `cproject.yml` files. Read the [CMSIS-Toolbox > Build Overview](#) documentation for project examples.


Add CMSIS components with the **Software Components** view. When you add components, the `cproject.yml` files are updated.


6.8 Convert a Keil µVision project to a csolution project

You can convert any Keil® µVision® project to a csolution project from the CMSIS csolution extension. Note that the conversion does not work with Arm® Compiler 5 projects. You can download Arm Compiler 5 projects from the website, but you cannot use them with the extensions. Only Arm Compiler 6 projects can be converted. As a workaround, you can update Arm Compiler 5 projects to Arm Compiler 6 in Keil µVision, then convert the projects to csolutions in Visual Studio Code. For more help and information on converting to Arm Compiler 6, see the [Migrate Arm Compiler 5 to Arm Compiler 6 application note](#) and the [Arm Compiler for Embedded Migration and Compatibility Guide](#).

Procedure

1. Open the project that contains the *.uvprojx that you want to convert in Visual Studio Code.
2. Right-click the *.uvprojx and select **Convert µVision Project to Csolution** from the **Explorer**. The conversion starts immediately.

Alternatively, if you are starting from an empty workspace, you can click **CMSIS**  in the Activity Bar to open the **CMSIS** view. Then choose one of the following two options:

- Click **Convert a µVision Project** and open your *.uvprojx file to convert it
- Move your cursor over the **Solution outline**, click **More Actions** , then select **Convert µVision Project to Csolution** and open your *.uvprojx file to convert it

A dialog box displays. You can carry out the following tasks:

- Open the solution in a new workspace (**Open** option)
- Open the solution in a new window and new workspace (**Open project in new window** option)

You can also run the **CMSIS: Convert µVision project to Csolution** command from the Command Palette. In that case, select the *.uvprojx that you want to convert on your machine and click **Select**.

If there are conversion errors, check the uv2csolution.log file available.

3. Confirm that the [Environment Manager extension](#) can automatically activate the workspace and download the tools specified in your vcpkg-configuration.json file.
4. Check the **OUTPUT** tab (**View > Output**). Select **µVision to Csolution Conversion** in the drop-down list on the right-hand side of the **OUTPUT** tab.

The *.cproject.yml and *.csolution.yml files are available in the folder where the *.uvprojx is stored.

6.9 Configure a build task

In Visual Studio Code, you can automate certain tasks by configuring a file called `tasks.json`. See [Integrate with External Tools via Tasks](#) for more details.

With the CMSIS csolution extension, you can configure a build task using the `tasks.json` file to build your projects. When you run the build task, the extension runs `cbuild` with the options that you defined.



As mentioned in [Get started with an example project](#), the examples provided on [keil.arm.com](https://www.keil.arm.com) are shipped with a `tasks.json` file that already contains some configuration settings to build your project. You can modify the default configuration if needed.

If you are working with an example for which no build task has been configured yet, follow these steps:

1. Go to **Terminal > Configure Tasks....**
2. In the drop-down list that opens at the top of the window, select the **CMSIS Build** task.

A `tasks.json` file opens with the default configuration.

3. Modify the configuration.

With IntelliSense, you can see the full set of task properties and values available in the `tasks.json` file. You can bring up suggestions using **Trigger Suggest** from the Command Palette. You can also display the task properties specific to `cbuild` by typing `cbuild --help` in the terminal.

4. Save the `tasks.json` file.

Alternatively, you can define a default build task using **Terminal > Configure Default Build Task....** The **Terminal > Run Build Task...** option triggers the execution of default build tasks.

6.10 Initialize your csolution project

If you have a csolution project that does not already contain a `vcpkg-configuration.json` file, a `tasks.json` file, and a `launch.json` file, you can use the **Initialize CMSIS project** option to generate these files and start working with your project. Examples from [keil.arm.com](https://www.keil.arm.com) or csolution projects created from scratch from the **Create New CMSIS Solution** view already contain the JSON files required.

Procedure

1. From the **Explorer**, open your workspace.
2. Right-click anywhere in the workspace and select **Initialize CMSIS project**.
The extension generates a `vcpkg-configuration.json` file, a `tasks.json` file, and a `launch.json` file that are already preconfigured.

6.11 Use the CMSIS csolution API

If you want to create your own Visual Studio Code csolution extension, the CMSIS csolution extension exposes an API that other extensions can use.

For the API specification, see the [CMSIS csolution extension API](#) page.

For information about authoring extensions, see the [Extension API](#) chapter in the Visual Studio Code documentation.

For csolution examples, go to [keil.arm.com](https://www.keil.arm.com).

7. Arm Device Manager extension

Look at the [hardware supported](#) with the Keil® Studio extensions.

Then, manage your hardware with the Device Manager extension:

- [Connect your hardware](#)
- [Edit your hardware](#)
- [Open a serial monitor](#)

7.1 Supported hardware

Describes the hardware that the Device Manager extension and other Keil® Studio extensions support.

7.1.1 Supported development boards and MCUs

The extensions support the [development boards](#) and [MCUs](#) available on keil.arm.com.

7.1.2 Supported debug probes

The following debug probes are supported.

7.1.2.1 WebUSB-enabled CMSIS-DAP debug probes

The extensions support debug probes that implement the CMSIS-DAP protocol, such as:

- The DAPLink implementation: see the [ARMmbed/DAPLink](#) repository
- The LPC-Link2 implementation: see the [LPC-Link2](#) documentation
- The Nu-Link2 implementation: see the [Nuvoton](#) repository
- The ULINKplus™ (firmware version 2) implementation: see the [Keil MDK](#) documentation

See the [CMSIS-DAP](#) documentation for general information.

7.1.2.2 ST-LINK debug probes

The extensions support ST-LINK/V2 probes and later, and the ST-LINK firmware available for these probes.

The recommended debug implementation versions of the ST-LINK firmware are:

- For ST-LINK/V2 and ST-LINK/V2-1 probes: J36 and later


- For STLINK-V3 probes: J6 and later

See “Firmware naming rules” in [Overview of ST-LINK derivatives](#) for more details on naming conventions.

7.2 Connect your hardware

Describes how to connect your hardware for the first time.

Procedure

1. Click **Device Manager**  in the Activity Bar to open the extension.
2. Connect your hardware to your computer over USB.
The hardware is detected and a pop-up message displays in the bottom right-hand corner.
3. Click **OK** to use the hardware.

Alternatively, click **Add Device**  and select your hardware in the drop-down list that displays at the top of the window.

Your hardware is now ready to be used to run and debug a project.


Next steps

If you need to add more hardware, click **Add Device**  in the top right-hand corner.

7.3 Edit your hardware

If your board cannot be detected or if you are using an external debug probe, you can edit the hardware entry from the Device Manager and specify a Device Family Pack (DFP) and a device name retrieved from the pack to be able to work with your hardware. DFPs handle device support.

Procedure

1. Move your cursor over the hardware that you want to edit and click **Edit Device** .
2. Edit the hardware name in the field that displays at the top of the window if needed and press **Enter**. This is the name that displays in the Device Manager.
3. Select a Device Family Pack (DFP) CMSIS-Pack for your hardware in the drop-down list.
4. Select a device name to use from the CMSIS-Pack in the field and press **Enter**.

7.4 Open a serial monitor

Open a serial monitor. The serial output shows the output of your board. You can use the serial output as a debugging tool or to communicate directly with your board.

Procedure

1. Move your cursor over the hardware for which you want to open a serial monitor and click

Open Serial .

A drop-down list displays at the top of the window where you can select a baud rate (the data rate in bits per second between your computer and your hardware). To view the output of your hardware correctly, you must select an appropriate baud rate. The baud rate that you select must be the same as the baud rate of your active project.

2. Select a baud rate.
A **TERMINAL** tab opens with the baud rate selected.

8. Arm Debugger extension

Run a project on your hardware with Arm Debugger and start an Arm Debugger debug session with the Arm Debugger extension.

For a full list of commands with usage instructions and examples for the Arm Debugger engine, see the [Arm Debugger Command Reference](#) guide.



Most examples provided on keil.arm.com are shipped with `tasks.json` and `launch.json` files that already contain some configuration to run and debug your project. You can modify the default configuration if needed.

8.1 Run your project on your hardware with Arm Debugger

Find out how to configure a task to run your project on your hardware and what the configuration options are.

8.1.1 Configure a task

To run a project on your hardware, you must first configure a task. The task transfers the binary into the appropriate memory locations on the hardware's flash memory.

Use the `arm-debugger.flash: Flash Device` task. The [CMSIS-Packs](#) used in your project control the flash download.

Procedure

1. Open the Command Palette. Search for `Tasks: Configure Task` and then select it.
2. Select the `arm-debugger.flash: Flash Device` task.

This task adds the following lines in the `tasks.json` file in the `.vscode` folder of the project.

```
{
  "type": "arm-debugger.flash",
  "serialNumber": "${command:device-manager.getSerialNumber}",
  "program": "${command:arm-debugger.getApplicationFile}",
  "cmsisPack": "${command:device-manager.getDevicePack}",
  "problemMatcher": [],
  "label": "arm-debugger.flash: Flash Device"
}
```

3. Save the `tasks.json` file.

8.1.2 Override or extend the default run configuration options for Arm Debugger

You can override or extend the default configuration options. See [Arm Debugger run configuration options](#).

In order to flash a hardware device, the task configuration must know which CMSIS-Pack to read information from and the device name in the CMSIS-Pack to use. These settings are named `cmsisPack` and `deviceName`, and you can specify them in multiple ways.

If your target hardware is automatically detected, or if the pack and device name have been set for it, the task configuration can automatically pick this up by using the following code:

```
{
  [...]
  "serialNumber": "${command:device-manager.getSerialNumber}",
  "cmsisPack": "${command:device-manager.getDevicePack}",
  "deviceName": "${command:device-manager.getDeviceName}",
  [...]
}
```

Alternatively, you can specify these settings directly as a full path to the CMSIS-Pack file or a folder on your machine:

```
{
  [...]
  "serialNumber": "${command:device-manager.getSerialNumber}",
  "cmsisPack": "/Users/me/mypack.pack",
  "deviceName": "STM32H745XIHx",
  [...]
}
```

You can also use the short code for the CMSIS-Pack in the format `<vendor>::<pack>@<version>`:

```
{
  [...]
  "serialNumber": "${command:device-manager.getSerialNumber}",
  "cmsisPack": "Keil::STM32H7xx_DFP@3.1.0",
  "deviceName": "STM32H745XIHx",
  [...]
}
```

Note that this code triggers an automatic download of the CMSIS-Pack.

8.1.3 Arm Debugger run configuration options

The extension provides the following run configuration options.

Configuration option	Description
"cmsisPack"	Path (file or URL) to a DFP (Device Family Pack) CMSIS-Pack for your hardware. Can be used with: <code>device-manager.getDevicePack</code> - Gets the CMSIS-Pack for the selected device.

Configuration option	Description
"connectMode"	Connection mode. Possible values: <code>auto</code> (debugger decides), <code>haltOnConnect</code> (halts for any reset before running), <code>underReset</code> (holds external NRST line asserted), <code>preReset</code> (prereset using NRST), <code>running</code> (connects to running target without altering state). Default: <code>auto</code> .
"debugClockSpeed"	Maximum clock frequency for the debug communication. Actually used frequency depends on used debug probe. <code>auto</code> uses a target specific default. Requires Arm Debugger for Visual Studio Code v6.0.2 or later. Possible values: <code>auto</code> , <code>50MHz</code> , <code>33MHz</code> , <code>25MHz</code> , <code>20MHz</code> , <code>10MHz</code> , <code>5MHz</code> , <code>2MHz</code> , <code>1MHz</code> , <code>500kHz</code> , <code>200kHz</code> , <code>100kHz</code> , <code>50kHz</code> , <code>20kHz</code> , <code>10kHz</code> , <code>5kHz</code> . Default: <code>auto</code> .
"debugPortMode"	Debug port mode to use the for the debug connection. Requires Arm Debugger for Visual Studio Code v6.0.2 or later. Possible values: <code>auto</code> , <code>JTAG</code> , <code>SWD</code> . Default: <code>auto</code> .
"deviceName"	CMSIS-Pack device name. Can be used with: <code>device-manager.getDeviceName</code> - Gets the device name from the DFP (Device Family Pack) of the selected device.
"openSerial"	Baud rate to open the serial output of a device after flash (requires Arm Device Manager). Possible values: <code>115200</code> , <code>57600</code> , <code>38400</code> , <code>19200</code> , <code>9600</code> , <code>4800</code> , <code>2400</code> , <code>1800</code> , <code>1200</code> , <code>600</code> .
"pdsc"	Path (file or URL) to a PDSC file.
"probe"	Name of probe to use for the debug connection. Possible values: <code>ULINKpro</code> , <code>ULINKpro D</code> , <code>ULINK2</code> , <code>CMSIS-DAP</code> , <code>ULINKplus</code> , <code>ST-Link</code> . Default: <code>CMSIS-DAP</code> .
"processorName"	CMSIS-Pack processor name for multicore devices.
"program" or "programs"	Path or paths (file or URL) to one or more projects to use in order of loading. Requires Arm Debugger for Visual Studio Code v6.0.2 or later. Can be used with: <code>arm-debugger.getApplicationFile</code> : Returns an AXF or ELF file used for CMSIS run and debug.
"serialNumber"	Serial number of the connected USB hardware to use. Can be used with: <code>device-manager.getSerialNumber</code> - Gets the serial number of the selected device.
"targetAddress"	Synonymous with <code>serialNumber</code> .
"vendorName"	CMSIS-Pack vendor name.
"workspaceFolder"	Current Arm Debugger workspace folder. Default: <code>"\${workspaceFolder}"</code> .

Other Visual Studio Code options are also available. Use the **Trigger Suggestions** command (**Ctrl +Space**) to see what is available and read the [Visual Studio Code documentation on tasks](#), as well as the [Schema for tasks.json](#) page.

8.1.4 Use the Run and Debug Configuration visual editor for your run configuration

As an alternative to editing the `tasks.json` file of your solution to change the run configuration options, you can use the **Run and Debug Configuration** visual editor.

Procedure

1. To open the editor, either:

- From the **Explorer**, right-click the `tasks.json` file that is stored in the `.vscode` folder of the solution and select **Open Run and Debug Configuration**.
- From the **Explorer**, right-click the `tasks.json` file and select **Open With...**, then select **Run and Debug Configuration** in the drop-down list that displays at the top of the window.
- If the `tasks.json` file is already open in the editor, click **Open Run and Debug Configuration to the Side**  in the top right-hand corner.

2. You can define several run configurations in the `tasks.json` file. Click **Add** to add a new configuration block in the JSON file, then select the configuration that you want to modify in the drop-down list next to **Add**.
3. Modify your run configuration:
 - **Probe Type:** In the drop-down list, select a type for the debug probe that you are using or the debug unit on your board.
 - Default value: `CMSIS-DAP`. If the Arm Debugger extension cannot set the probe type automatically, the default value is `CMSIS-DAP`.
 - If you have connected a probe or a board over USB to your computer, the Arm Debugger extension sets a probe type based on the serial number of the hardware detected.
 - **Serial Number:** In the drop-down list, select the serial number of the debug probe or debug unit on your board.
 - Default value: `auto`. With `auto`, the serial number of the active device in the Arm Device Manager extension is used by default. The `"${command:device-manager.getSerialNumber}"` command is added in the JSON file for `"serialNumber"`.
 - You can also select the serial number of the active device in the drop-down list, or directly type a serial number.

Click **Open Arm Device Manager** to check what your active device is.

- **CMSIS-Pack:** Select the Device Family Pack (DFP) for the target debug probe or board.
 - Default value: `auto`. With `auto`, the DFP for the active device in the Arm Device Manager extension is used by default. The `"${command:device-manager.getDevicePack}"` command is added in the JSON file for `cmsisPack`.
 - You can also select the DFP for the active device in the drop-down list, or directly type the name of a DFP in the format `<vendor>::<pack>@<version>`. For example: `ARM::V2M_MPS3_SSE_300_BSP@1.4.0`.
- **CMSIS-Pack Device Name:** Select the name of the target device (target chip on your probe or board).
 - Default value: `auto`. With `auto`, the device name is deduced from the information available for the probe or board. The `"${command:device-manager.getDeviceName}"` command is added in the JSON file for `deviceName`.
 - You can also select the device name in the drop-down list, or directly type the device name. For example: `MPS3_SSE_300`. The device name available in the drop-down list is the one defined in the `*.csolution.yml` file of your solution.
- **Processor Name:** If you are using a device with multiple cores, select the processor to use.
 - Default value: `auto`. With `auto`, the processor name defined in the `*.csolution.yml` file of your solution is used by default. The `"${command:cmsis-csolution.getProcessorName}"` command is added in the JSON file for `"processorName"`.
 - You can also directly type a processor name. For example: `cm4`.

- **Connection Mode:** Select a connection mode. The connection mode controls the operations that are run when the debugger connects to the target debug probe or the board.
 - Default value: `auto`: The debugger decides which connect mode to use based on the connected hardware. For ST boards, when `auto` is selected, `underReset` is used. For other boards, `haltOnConnect` is used.
 - `haltOnConnect`: Stops the CPU of the target debug probe or board for a reset before the flash download.
 - `underReset`: Asserts the hardware reset during the connection.
 - `preReset`: Triggers a hardware reset pulse before the connection.
 - `running`: Connects to the CPU without stopping the program execution during the connection.
 - **Program Files:** Indicate the path to an AXF or ELF file to run on your hardware. You can add as many files as you need. Arm Debugger uses the files in the order you provide.
 - Default value: The `${command:arm-debugger.getApplicationFile}` command is added in the JSON file for "program" when you add a new configuration block. You can use `arm-debugger.getApplicationFile` with AXF or ELF files.
 - You can also use the **Add** button to directly point to a file.
 - **Baud Rate:** Select a baud rate to view the serial output of the target debug probe or board correctly.
4. Save your changes.

8.1.5 Run your project

Run the project on your hardware.

Before you begin


When you have several solutions grouped in a single folder on your machine, Visual Studio Code does not take into account the `tasks.json` and `launch.json` files that you might have created for each solution. Instead, Visual Studio Code generates new JSON files at the root of the workspace in a `.vscode` folder and ignores the other JSON files.

As a result, you might have issues running or debugging a project.

As a workaround, open one solution first, then add other solutions to your workspace with the **File > Add Folder to Workspace** option.


Procedure

1. Check that your hardware is connected to your computer.
2. Open the Command Palette. Search for `Tasks: Run Task` and then select it.
3. Select `arm-debugger.flash: Flash Device` in the drop-down list.

Alternatively, if you have installed the Keil Studio Pack, go to the **CMSIS** view and click **Run**  in the **Solution outline** header, or next to the project that you want to run.

4. If you are using a device with multiple cores and you did not specify a "processorName" in the `tasks.json` file, and you do not have the CMSIS csolution extension installed, then you must select the appropriate processor for your project in the **Select a processor** drop-down list that displays at the top of the window.
5. Check the **TERMINAL** tab to verify that the project has run correctly.
If the Arm Debugger engine cannot be found on your machine, an **Arm Debugger not found** dialog box displays.

Select one of these options:

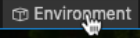- Click **Install Arm Debugger** to add it to your environment. The `vcpkg-configuration.json` file is updated. Check that the environment is activated in the status bar .
- Click **Configure Path** to indicate the path to the Arm Debugger engine in the settings.

8.2 Debug your project with Arm Debugger

Debug a project.

8.2.1 Add configuration

As is the case for running a project, you must first add a launch configuration to debug your project. Creating a launch configuration file allows you to configure and save debugging setup details. Visual Studio Code keeps debugging configuration information in a `launch.json` file.

Procedure

1. Open the `launch.json` file that is stored in the `.vscode` folder of your project and add the following lines inside "configurations":[]:

```
{
  "name": "Arm Debugger",
  "type": "arm-debugger",
  "request": "launch",
  "serialNumber": "${command:device-manager.getSerialNumber}",
  "program": "${command:embedded-debug.getApplicationFile}",
  "cmsisPack": "${command:device-manager.getDevicePack}"
}
```

2. Save the `launch.json` file.

8.2.2 Override or extend the default debug configuration options for Arm Debugger

You can override or extend the default configuration options as required. See [Arm Debugger debug configuration options](#) for more details.

See also the details provided for the [tasks.json file](#) for `cmsisPack` and `deviceName`. In order to debug a hardware device, the launch configuration must know which CMSIS-Pack to read information from and the device name in the CMSIS-Pack to use.

8.2.3 Arm Debugger debug configuration options


The extension provides the following debug configuration options.

Configuration option	Description
"cdbEntry"	Arm Debugger Configuration Database Entry to select.
"cdbEntryParams"	One or more key/value settings specific to the selected cdbEntry. Example: model_params: -f \${workspaceFolder}/model_config.txt
"cmsisDevice"	Concatenation of CMSIS-Pack name, device vendor, device name, and processor name (if multicore). Deprecated. Use cmsisPack, pdsc, vendorName, deviceName, and processorName instead.
"cmsisPack"	Path (file or URL) to a DFP (Device Family Pack) CMSIS-Pack for your hardware. Can be used with: device-manager.getDevicePack - Gets the CMSIS-Pack for the selected device.
"connectMode"	Connection mode. Possible values: auto (debugger decides), haltOnConnect (halts for any reset before running), underReset (holds external NRST line asserted), preReset (prereset using NRST), running (connects to running target without altering state). Default: auto.
"debugClockSpeed"	Maximum clock frequency for the debug communication. Actually used frequency depends on used debug probe. auto uses a target specific default. Requires Arm Debugger for Visual Studio Code v6.0.2 or later. Possible values: auto, 50MHz, 33MHz, 25MHz, 20MHz, 10MHz, 5MHz, 2MHz, 1MHz, 500kHz, 200kHz, 100kHz, 50kHz, 20kHz, 10kHz, 5kHz. Default: auto.
"debugFrom"	The symbol the debugger will run to before debugging. Default: "main".
"debugPortMode"	Debug port mode to use the for the debug connection. Requires Arm Debugger for Visual Studio Code v6.0.2 or later. Possible values: auto, JTAG, SWD. Default: auto.
"deviceName"	CMSIS-Pack device name. Can be used with: device-manager.getDeviceName - Gets the device name from the DFP (Device Family Pack) of the selected device.
"pathMapping"	A mapping of remote paths to local paths to resolve source files.
"pdsc"	Path (file or URL) to a PDSC file.
"probe"	Name of probe to use for the debug connection. Possible values: ULINKpro, ULINKpro D, ULINK2, CMSIS-DAP, ULINKplus, ST-Link. Default: CMSIS-DAP.
"processorName"	CMSIS-Pack processor name for multicore devices.
"program" or "programs"	Path or paths (file or URL) to one or more projects to use in order of loading. Requires Arm Debugger for Visual Studio Code v6.0.2 or later. Can be used with: arm-debugger.getApplicationFile: Returns an AXF or ELF file used for CMSIS run and debug.
"programMode"	Mode to program an application to a target. Possible values: auto, flash, ram, mixed. Default: auto.
"resetAfterConnect"	Resets the device after having acquired control of the processor.
"resetMode"	Type of reset to use. Possible values: auto (debugger decides), system (use ResetSystem sequence), hardware (use ResetHardware sequence), processor (use ResetProcessor sequence). Default: auto.
"searchPaths"	Array of paths to source locations.
"serialNumber"	Serial number of the connected USB hardware to use. Can be used with: device-manager.getSerialNumber - Gets the serial number of the selected device.
"targetAddress"	Synonymous with serialNumber.
"vendorName"	CMSIS-Pack vendor name.
"workspaceFolder"	Current Arm Debugger workspace folder. Default: "\${workspaceFolder}".

8.2.4 Use the Run and Debug Configuration visual editor for your debug configuration

As an alternative to editing the `launch.json` file of your solution to change the debug configuration options, you can use the **Run and Debug Configuration** visual editor.

Procedure

- To open the editor, either:
 - From the **Explorer**, right-click the `launch.json` file that is stored in the `.vscode` folder of the solution and select **Open Run and Debug Configuration**.
 - From the **Explorer**, right-click the `launch.json` file and select **Open With...**, then select **Run and Debug Configuration** in the drop-down list that displays at the top of the window.
 - If the `launch.json` file is already open in the editor, click **Open Run and Debug Configuration to the Side**  in the top right-hand corner.
- You can define several debug configurations in the `launch.json` file. Click **Add** to add a new configuration block in the JSON file, then select the configuration that you want to modify in the drop-down list next to **Add**.
- If you are using a `Launch` configuration, modify your debug configuration as follows:
 - Probe Type:** In the drop-down list, select a type for the debug probe that you are using or the debug unit on your board.
 - Default value: `CMSIS-DAP`. If the Arm Debugger extension cannot set the probe type automatically, the default value is `CMSIS-DAP`.
 - If you have connected a probe or a board over USB to your computer, the Arm Debugger extension sets a probe type based on the serial number of the hardware detected.
 - Serial Number:** In the drop-down list, select the serial number of the debug probe or debug unit on your board.
 - Default value: `auto`. With `auto`, the serial number of the active device in the Arm Device Manager extension is used by default. The `"${command:device-manager.getSerialNumber}"` command is added in the JSON file for `"serialNumber"`.
 - You can also select the serial number of the active device in the drop-down list, or directly type a serial number.

Click **Open Arm Device Manager** to check what your active device is.

- CMSIS-Pack:** Select the Device Family Pack (DFP) for the target debug probe or board.
 - Default value: `auto`. With `auto`, the DFP for the active device in the Arm Device Manager extension is used by default. The `"${command:device-manager.getDevicePack}"` command is added in the JSON file for `cmsisPack`.
 - You can also select the DFP for the active device in the drop-down list, or directly type the name of a DFP in the format `<vendor>::<pack>@<version>`. For example: `ARM::V2M_MPS3_SSE_300_BSP@1.4.0`.
- CMSIS-Pack Device Name:** Select the name of the target device (target chip on your probe or board).

- Default value: `auto`. With `auto`, the device name is deduced from the information available for the probe or board. The `"${command:device-manager.getDeviceName}"` command is added in the JSON file for `deviceName`.
- You can also select the device name in the drop-down list, or directly type the device name. For example: `MP33_SSE_300`. The device name available in the drop-down list is the one defined in the `*.csolution.yml` file of your solution.
- **Processor Name:** If you are using a device with multiple cores, select the processor to use.
 - Default value: `auto`. With `auto`, the processor name defined in the `*.csolution.yml` file of your solution is used by default. The `"${command:cmsis-csolution.getProcessorName}"` command is added in the JSON file for `"processorName"`.
 - You can also directly type a processor name. For example: `cm4`.
- **Connection Mode:** Select a connection mode. The connection mode controls the operations that are run when the debugger connects to the target debug probe or the board.
 - Default value: `auto`: The debugger decides which connect mode to use based on the connected hardware. For ST boards, when `auto` is selected, `underReset` is used. For other boards, `haltOnConnect` is used.
 - `haltOnConnect`: Stops the CPU of the target debug probe or board for a reset before the flash download.
 - `underReset`: Asserts the hardware reset during the connection.
 - `preReset`: Triggers a hardware reset pulse before the connection.
 - `running`: Connects to the CPU without stopping the program execution during the connection.
- **Reset Mode:** Select a reset mode. The reset mode controls the reset operations performed by the debugger.
 - `auto` (default): The debugger decides which reset to use based on information from the CMSIS-Pack.
 - `system`: Uses the `ResetSystem` sequence from the CMSIS-Pack.
 - `hardware`: Uses the `ResetHardware` sequence from the CMSIS-Pack.
 - `processor`: Uses the `ResetProcessor` sequence from the CMSIS-Pack.
- **Debug From:** Select a function from which the debugger should start. Default value: `main`. The debugging session starts and the debugger stops at the `main()` function of the program.
- **Program Mode:** Select a program mode. The program mode defines the type of debugging to use: flash debugging `flash`, RAM debugging `ram`, or both `mixed`. Default value: `auto`. In `auto` mode, the debugger decides.

The main difference between flash and RAM debugging is in the type of memory used for storing and executing the code during a debugging session:

- Flash debugging: The code is stored and executed from Flash memory. The debugger internally loads debug information but does not load anything to the target.

- RAM debugging: The debugger loads the code into RAM after connection to the target system. The code is first copied from its storage location (like Flash memory) into RAM before execution.
 - **Program Files:** Indicate the path to an AXF or ELF file to use for debugging. You can add as many files as you need. Arm Debugger uses the files in the order you provide.
 - Default value: The `${command:arm-debugger.getApplicationFile}` command is added in the JSON file for "program" when you add a new configuration block. You can use `arm-debugger.getApplicationFile` with AXF or ELF files.
 - You can also use the **Add** button to directly point to a file.
4. To add an `attach` configuration, an extra step is required. Click **Add Configuration...** in the bottom right-hand corner of the JSON file and select `Arm Debugger: Attach` in the drop-down list. Use an `attach` configuration if you want to debug a program that is already running. See [Launch versus attach configurations](#) for explanations on the `Launch` and `Attach` core debugging modes in Visual Studio Code.
 5. If you are using an `attach` configuration, modify your debug configuration as follows:
 - If the Arm Debugger engine is running on a distant server, indicate the address of the server in the format `ws://<host>:<port>` (websocket).
 - If the Arm Debugger engine is running on your machine, use `<host>:<port>` (socket).
 6. Save your changes.

8.2.5 Start an Arm Debugger session

Start a debug session.


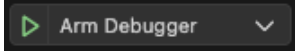

Before you begin

When you have several solutions grouped in a single folder on your machine, Visual Studio Code does not take into account the `tasks.json` and `launch.json` files that you might have created for each solution. Instead, Visual Studio Code generates new JSON files at the root of the workspace in a `.vscode` folder and ignores the other JSON files.

As a result, you might have issues running or debugging a project.

As a workaround, open one solution first, then add other solutions to your workspace with the **File > Add Folder to Workspace** option.

Procedure


1. Check that your device is connected to your computer.
2. To start a debug session, go to the **RUN AND DEBUG** view  and select the `Arm Debugger` configuration in the list . Click **Start Debugging**. Alternatively, if you have installed the Keil Studio Pack, go to the **CMSIS** view and click **Debug**  in the **Solution outline** header, or next to the project that you want to debug.
3. If you are using a device with multiple cores and you did not specify a "processorName" in the `launch.json` file, and you do not have the CMSIS csolution extension installed, then you must

select the appropriate processor for your project in the **Select a processor** drop-down list that displays at the top of the window.

The **Run and Debug** view displays and the debug session starts. The debugger stops at the “main” function of your project.

4. Check the **Debug Console** tab to see the debugging output.
If the Arm Debugger engine cannot be found on your machine, an **Arm Debugger not found** dialog box displays.

Select one of these options:

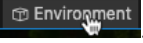- Click **Install Arm Debugger** to add it to your environment. The `vcpkg-configuration.json` file is updated. Check that the environment is activated in the status bar .
- Click **Configure Path** to indicate the path to the Arm Debugger engine in the settings.

8.2.6 Set breakpoints

Breakpoints are useful when you know which part of your code you want to examine. To look at values of variables, or to check if a block of code is getting executed, you can set one or more breakpoints to suspend your running code.

See the [Visual Studio Code documentation](#) for more details.




With the current version of the Arm Debugger extension, you cannot set breakpoints in assembly files by default. To be able to set breakpoints in assembly files, go to the settings and select **Allow Breakpoints Everywhere**.

8.2.7 Inspect registers

The **Registers** view displays register contents for the detected processor. Start a debug session as explained in [Start an Arm Debugger session](#) to display the **Registers** view in the **Run and Debug** view.

The **Registers** view organizes registers into groups. These groups vary according to the processor type you are using and the system you are debugging. During debugging, register values change as your code executes.

Here is an example of what you can see in the **Registers** view for a Cortex-M4 processor:

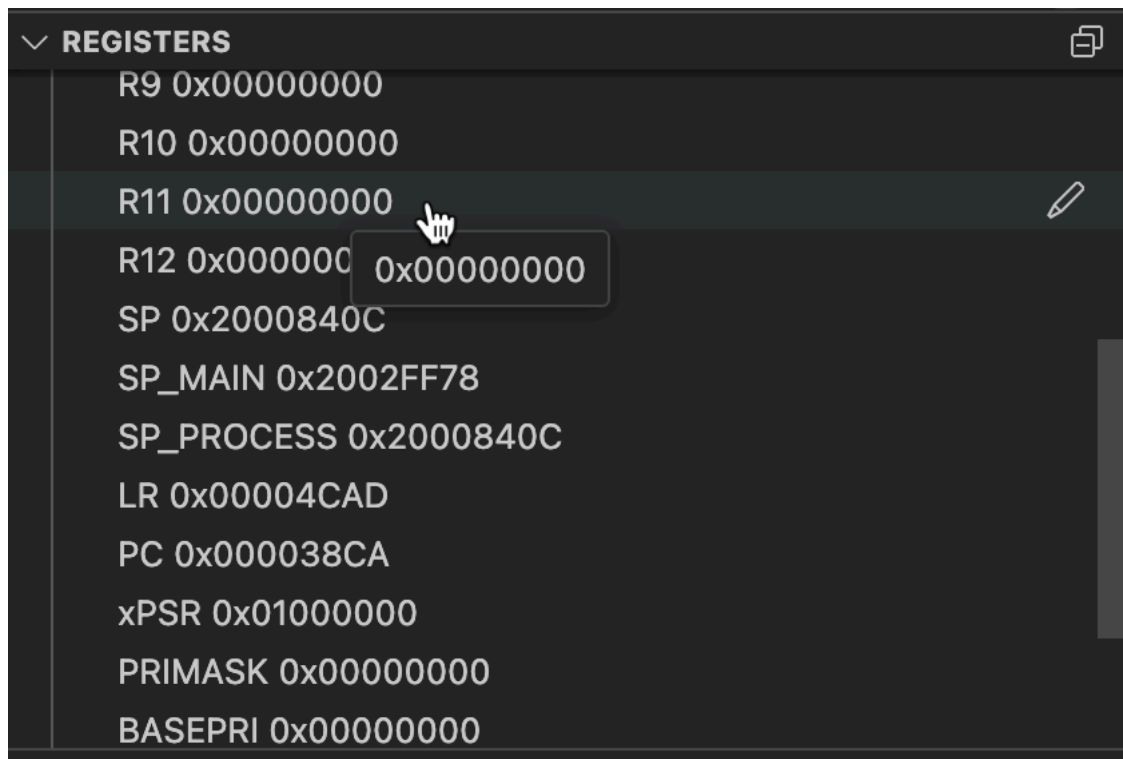

The **Registers** view can include:



- **Processor core registers:** In Arm processors, each processor core has a set of general-purpose registers that are used for temporary data storage and manipulation during program execution. These registers are used by the processor for various operations, including arithmetic, logical, and data movement instructions. Additionally, Arm processors may also have other specific registers, such as Program Counter (PC) and Stack Pointer (SP), which are essential for managing program flow and maintaining the stack. These registers collectively form the register file of the processor core, providing a fast and efficient means for the processor to store and retrieve data during computation.
- **System registers:** In Arm processors, system registers are special-purpose registers that control and configure various aspects of a processor's behavior. These registers are part of the Arm architecture and play a crucial role in managing system-level functionality. System registers help control the processor's operating mode, interrupt handling, and other system-related features.
- **Floating-Point Unit (FPU) registers:** In Arm processors, the FPU is responsible for handling floating-point arithmetic operations. The FPU has its own set of registers distinct from the general-purpose registers. These registers are used to store floating-point numbers and perform operations like addition, subtraction, multiplication, and division on them.

8.2.7.1 Edit registers

Edit registers during a debug session.

Procedure

1. Start a debug session as explained in [Start an Arm Debugger session](#).

2. Click **Pause**  to pause the debug session.
The **Registers** view displays register values that you can edit.
3. Move your cursor over the register values and click the pen icon  for the value that you want to update.
4. Enter a value or an expression in the field that opens at the top of the window and press **Enter**.
If you enter an expression, the result of the expression is written to the registers. For example:
Use `$SP+0x20` to add `0x20` to the content of the `SP` register. See the [Arm Debugger Command Reference](#) guide for more details on expressions.

Modified values are highlighted in the **Registers** view.

8.2.8 Next steps

Look at the [Visual Studio Code documentation](#) to learn more about the debugging features available in Visual Studio Code.

9. Activate your license to use Arm tools

You must activate a license to be able to use tools such as Arm® Compiler, Arm Debugger, or Fixed Virtual Platforms in your toolchain.

If you try to use a licensed tool without a license, a **No Arm License** status displays in the status bar and a pop-up message displays in the bottom right-hand corner.

1. Click **Manage Arm license** in the pop-up.
2. Select one of the following options in the drop-down list at the top of the window:
 - **Activate Arm Keil MDK Community Edition (non-commercial use)**: Select this option to switch to the Keil® MDK Community Edition license. You can use this license only for non-commercial projects.
 - **Activate or manage Arm licenses (opens in new window)**: Select this option to switch to the Keil MDK Professional Edition license. This option opens an **Arm License Management Utility** window where you can provide a product activation code to activate your Keil MDK Professional Edition license.

9.1 Troubleshooting expired or cache-expired licenses

If you try to use a licensed tool with a license that is expired or cache-expired, a warning displays in the status bar and a pop-up message displays in the bottom right-hand corner.



Cache-expired licenses happen when your local license could not be renewed, either because of network issues, lack of space on your device, or issues with your permissions.

1. Click **Manage Arm license** in the pop-up.
2. Depending on your license, one of the following options displays in the drop-down list at the top of the window:
 - If your license has expired, a **Get help for expired license** option displays. Select this option to view information on the steps that you need to take.
 - If your license is cache-expired, a **Get help for cache-expired license** option displays. Select this option to view information on the steps that you need to take.

10. Use CMSIS-Toolbox from the command line

CMSIS-Toolbox is a set of command-line tools that are integrated into the Keil® Studio extensions. You can also use them as standalone tools from the command line.

If you used an official example from keil.arm.com and installed the Keil Studio Pack as recommended, then CMSIS-Toolbox is already available on your machine as explained in [Get started with an example project](#).

The main tools that CMSIS-Toolbox provides and that you can use with the command line are:

- `cpackget`: Pack Manager. Used to install and manage CMSIS-Packs in your development environment.
- `cbuild`: Build invocation. Used to orchestrate the build process that translates a project to an executable binary image. `cbuild` invokes the different tools (`csolution`, `cpackget`, and `cbuildgen`) and launches the CMake compilation process.
- `csolution`: Project Manager. Used to create build information for embedded applications that consist of one or more related projects.

The [Build Tools](#) page describes how to use these tools with the command line.

10.1 Add CMSIS-Toolbox to the system PATH

The Environment Manager extension installs CMSIS-Toolbox and adds the tools into the Visual Studio Code system PATH.

If you install CMSIS-Toolbox without using the Environment Manager extension, add the installation path to the system PATH, or use the **Cmsis-csolution: Cmsis Toolbox Path** setting to add the path.

10.2 Support for packs

CMSIS-Packs (also often referred to as software packs) contain everything that you need to work with specific microcontroller families or development boards.

You can work with different types of packs:

- Public packs. These are packs that Arm or silicon and software vendors created and that are publicly available. Public packs are available from the [CMSIS-Packs page](#) on keil.arm.com.
- Private packs. These are packs that you have created but not shared yet, or packs that others shared with you privately. These can be local packs available on your system or remote packs available on the web.

This section gives you an overview on how to manage the different types of packs.



The Open-CMSIS-Pack documentation describes the different ways of adding or removing packs from the command line in detail. See [Adding packs](#) and [Removing packs](#).

10.2.1 Add public packs

You can use the functionality available in the CMSIS csolution extension to install public packs. See [Install CMSIS-Packs](#) for more details.

Alternatively, you can use the `cpackget add` command from the terminal to install the latest published version of public packs listed in the package index of a vendor. A package index file lists all the CMSIS-Packs hosted and maintained by a vendor. See the [Open-CMSIS-Pack documentation](#) for more information on package index files.



Explore the available CMSIS-Packs on keil.arm.com/packs and use the snippets available to update your `csolution.yml` file and install packs with `cpackget add`.

For example, the following command installs the latest public version of a public pack:

```
cpackget pack add Vendor::PackName
```

Where:

- `Vendor`: Is the name of the vendor who created the CMSIS-Pack
- `PackName`: Is the name of the CMSIS-Pack

After running `cpackget add`, reload Visual Studio Code to update the data that displays in the user interface.

10.2.2 Add private local packs

To work with a CMSIS-Pack that you created locally, use the `cpackget add` command from the terminal and reload Visual Studio Code so that the CMSIS csolution extension knows about the registered pack. Components from the pack appear in the **Software Components** view, and the file validation takes the new pack into account.

For example, the following command registers a local pack using a PDSC (pack description) file:

```
cpackget add /path/to/Vendor.PackName.pdsc
```

Where:

- `Vendor`: Is the name of the vendor who created the CMSIS-Pack
- `PackName`: Is the name of the CMSIS-Pack

PDSC files contain information about the content of packs.

After running `cpackget add` to add packs to the pack root folder, reload Visual Studio Code to update the data that displays in the user interface.

If you cannot see the components from the pack or packs that you have just added in the **Software Components** view, check the **Cmsis-csolution: Pack Cache Path** setting and the `CMSIS_PACK_ROOT` environment variable.

10.2.3 Add private remote packs

To install a remote pack available on the web, use the `cpackget add` command and the URL of the pack.

For example, the following command installs a pack version that can be downloaded from the web:

```
cpackget add https://vendor.com/example/Vendor.PackName.x.y.z.pack
```

Where:

- `vendor`: Is the name of the vendor who created the CMSIS-Pack
- `PackName`: Is the name of the CMSIS-Pack
- `x.y.z`: Is the specific version of the pack that you want to install

After running `cpackget add`, reload Visual Studio Code to update the data that displays in the user interface.

10.2.4 Remove packs

To remove packs from your system, use `cpackget rm`.

For example, the following command removes a specific pack version:

```
cpackget rm Vendor.PackName.x.y.z
```

Where:

- `vendor`: Is the name of the vendor who created the CMSIS-Pack
- `PackName`: Is the name of the CMSIS-Pack
- `x.y.z`: Is the specific version of the pack that you want to remove

After running `cpackget rm`, reload Visual Studio Code to update the data that displays in the user interface.

11. Debug your projects in the cloud with Arm Embedded Debugger

To debug embedded devices from a web browser, you can use the Arm Embedded Debugger.

Arm Keil Studio Cloud integrates the Arm Embedded Debugger. The Arm Embedded Debugger extension (Identifier: `arm.embedded-debug`) is also available in Visual Studio Code for the Web.

Read the following sections to [run a project on your hardware with Arm Embedded Debugger](#) and [start an Arm Embedded Debugger debug session](#).



The examples provided on keil.arm.com are shipped with `tasks.json` and `launch.json` files that already contain some configuration to run and debug your project. You can modify the default configuration if needed.

11.1 Run your project on your hardware with Arm Embedded Debugger

Find out how to configure a task to run your project on your hardware and what the configuration options are.

11.1.1 Configure a task

To run a project on your hardware, you must first configure a task. The task transfers the binary into the appropriate memory locations on the hardware's flash memory.

There are two tasks available:

- **Flash Device:** Use this task for CMSIS-DAP hardware (for example, LPC-Link2, Nu-Link2, and ULINKplus™) and ST-Link hardware. The [CMSIS-Packs](#) used in your project control the flash download.
- **Flash Device (DAPLink):** Use this task for DAPLink hardware. The DAPLink firmware takes care of the flash download.

Procedure

1. Open the Command Palette. Search for `Tasks: Configure Task` and then select it.
2. Select the `embedded-debug.flash:Flash Device` task or the `embedded-debug.daplink-flash:Flash Device (DAPLink)` task.

Depending on the task that you selected, this action adds the following lines in the `tasks.json` file in the `.vscode` folder of the project.

Default configuration for **Flash Device**:

```
{
  "label": "Flash Device",
  "type": "embedded-debug.flash",
  "program": "${command:embedded-debug.getApplicationFile}",
  "serialNumber": "${command:device-manager.getSerialNumber}",
  "cmsisPack": "${command:device-manager.getDevicePack}",
  "problemMatcher": [],
  "dependsOn": "CMSIS Build"
}
```

Default configuration for **Flash Device (DAPLink)**:

```
{
  "type": "embedded-debug.daplink-flash",
  "serialNumber": "${command:device-manager.getSerialNumber}",
  "program": "${command:embedded-debug.getBinaryFile}",
  "problemMatcher": [],
  "label": "embedded-debug.daplink-flash: Flash Device (DAPLink)"
}
```

3. Save the `tasks.json` file.

11.1.2 Override or extend the default run configuration options for the Embedded Debugger

You can override or extend the default configuration options. See [Embedded Debugger run configuration options for CMSIS-DAP and ST-Link hardware \(Flash Device\)](#) and [Embedded Debugger run configuration options for DAPLink hardware \(Flash Device DAPLink\)](#).

If you are using a **Flash Device** task, then in order to flash a hardware, the task configuration must know which CMSIS-Pack to read information from and the device name in the CMSIS-Pack to use. These settings are named `cmsisPack` and `deviceName`, and you can specify them in multiple ways.

If your target hardware is automatically detected, or if the pack and device name have been set for it, the task configuration can automatically pick this up by using the following code:

```
{
  [...]
  "serialNumber": "${command:device-manager.getSerialNumber}",
  "cmsisPack": "${command:device-manager.getDevicePack}",
  "deviceName": "${command:device-manager.getDeviceName}",
  [...]
}
```

Alternatively, you can specify these settings directly as a full path to the CMSIS-Pack file or a folder on your machine:

```
{
  [...]
  "serialNumber": "${command:device-manager.getSerialNumber}",
  "cmsisPack": "/Users/me/mypack.pack",
}
```

```

    "deviceName": "STM32H745XIHx",
    [...]
  }

```

You can also use the short code for the CMSIS-Pack in the format `<vendor>::<pack>@<version>`. Note that this triggers an automatic download of the CMSIS-Pack:

```

{
  [...]
  "serialNumber": "${command:device-manager.getSerialNumber}",
  "cmsisPack": "Keil::STM32H7xx_DFP@3.1.0",
  "deviceName": "STM32H745XIHx",
  [...]
}

```

11.1.3 Embedded Debugger run configuration options for CMSIS-DAP and ST-Link hardware (Flash Device)

The extension provides the following task configuration options.

Configuration option	Description
"cmsisPack"	Path (file or URL) to a DFP (Device Family Pack) CMSIS-Pack for your hardware. Command available: <code>device-manager.getDevicePack</code> - Gets the CMSIS-Pack for the selected device.
"connectMode"	Connection mode. Possible values: <code>auto</code> (debugger decides), <code>haltOnConnect</code> (halts for any reset before running), <code>underReset</code> (holds external NRST line asserted), <code>preReset</code> (prereset using NRST), <code>running</code> (connects to running target without altering state). Default: <code>auto</code> .
"dbgconf"	Path (file or URL) to a debug configuration file (dbgconf) file.
"deviceName"	CMSIS-Pack device name. Command available: <code>device-manager.getDeviceName</code> - Gets the device name from the DFP (Device Family Pack) of the selected device.
"eraseMode"	Type of flash erase to use. Possible values: <code>sectors</code> (erase only sectors to be programmed), <code>full</code> (erase full chip), <code>none</code> (skip flash erase). Default: <code>sectors</code> .
"flm" or "flms"	Path or paths (file or URL) to an FLM file or FLM files.
"openSerial"	Baud rate for connected device. Opens the serial output of the device in the TERMINAL tab with the baud rate specified.
"pdsc"	Path (file or URL) to a PDSC file.
"processorName"	CMSIS-Pack processor name for multicore devices.
"program" or "programs"	Path or paths (file or URL) to one or more projects to use. Command available: <code>embedded-debug.getApplicationFile</code> - Returns an AXF or ELF file used for CMSIS run and debug.
"programFlash"	Program code into flash. Default: <code>true</code> .
"programMode"	Mode to program an application to a target. Default: <code>auto</code> .
"resetAfterConnect"	Resets the hardware after having acquired control of the CPU. Default: <code>true</code> .
"resetMode"	Type of reset to use. Possible values: <code>auto</code> (debugger decides), <code>system</code> (use ResetSystem sequence), <code>hardware</code> (use ResetHardware sequence), <code>processor</code> (use ResetProcessor sequence). Default: <code>auto</code> .
"resetRun"	Issue a hardware reset at end of flash download. Default: <code>true</code> .
"sdf"	Path (file or URL) to an SDF file.
"serialNumber"	Serial number of the connected USB hardware to use. Command available: <code>device-manager.getSerialNumber</code> - Gets the serial number of the selected device.
"targetAddress"	Synonymous with <code>serialNumber</code> .

Configuration option	Description
"vendorName"	CMSIS-Pack vendor name.
"verifyFlash"	Verify the contents downloaded to flash. Default: true.

Other Visual Studio Code options are also available. Use the **Trigger Suggestions** command (**Ctrl +Space**) to see what is available and read the [Visual Studio Code documentation on tasks](#), as well as the [Schema for tasks.json](#) page.

11.1.4 Embedded Debugger run configuration options for DAPLink hardware (Flash Device DAPLink)

The extension provides the following task configuration options.

Configuration option	Description
"openSerial"	Baud rate for connected device. Opens the serial output of the device in the TERMINAL tab with the baud rate specified.
"program"	Path or paths (file or URL) to one or more projects to use. Command available: <code>embedded-debug.getBinaryFile</code> - Returns a BIN or HEX file.
"serialNumber"	Serial number of the connected USB hardware to use. Command available: <code>device-manager.getSerialNumber</code> - Gets the serial number of the selected device.

Other Visual Studio Code options are also available. Use the **Trigger Suggestions** command (**Ctrl +Space**) to see what is available and read the [Visual Studio Code documentation on tasks](#), as well as the [Schema for tasks.json](#) page.

11.1.5 Run your project

Run the project on your hardware.

Before you begin

When you have several solutions grouped in a single folder on your machine, Visual Studio Code does not take into account the `tasks.json` and `launch.json` files that you might have created for each solution. Instead, Visual Studio Code generates new JSON files at the root of the workspace in a `.vscode` folder and ignores the other JSON files.


As a result, you might have issues running or debugging a project.

As a workaround, open one solution first, then add other solutions to your workspace with the **File > Add Folder to Workspace** option.

Procedure

1. Check that your hardware is connected to your computer.
2. Open the Command Palette. Search for **Tasks: Run Task** and then select it.

3. Select the `embedded-debug.flash:Flash Device` task or the `embedded-debug.daplink-flash:Flash Device (DAPLink)` task in the drop-down list.

Alternatively, if you have installed the Keil Studio Pack, go to the **CMSIS** view and click **Run**  in the **Solution outline** header, or next to the project that you want to run.

4. If you are using a device with multiple cores, you must select the appropriate processor for your project in the **Select a processor** drop-down list that displays at the top of the window.
5. Check the **TERMINAL** tab to verify that the project has run correctly.

11.2 Debug your project with the Embedded Debugger

Debug a project.

11.2.1 Add configuration

As is the case for running a project, you must first add a launch configuration to debug your project. Creating a launch configuration file allows you to configure and save debugging setup details. Visual Studio Code keeps debugging configuration information in a `launch.json` file.

Procedure

1. Open the `launch.json` file that is stored in the `.vscode` folder of your project and add the following lines inside `"configurations": []`:

```
{
  "configurations": [
    {
      "name": "Embedded Debug",
      "type": "embedded-debug",
      "request": "launch",
      "serialNumber": "${command:device-manager.getSerialNumber}",
      "program": "${command:embedded-debug.getApplicationFile}",
      "cmsisPack": "${command:device-manager.getDevicePack}",
      "debugFrom": "main"
    }
  ]
}
```

2. Save the `launch.json` file.

11.2.2 Override or extend the default debug configuration options for the Embedded Debugger

You can override or extend the default configuration options as required. See [Embedded Debugger debug configuration options](#) for more details.

See also the details provided for the [tasks.json file](#) for `cmsisPack` and `deviceName`. In order to debug a hardware device, the launch configuration must know which CMSIS-Pack to read information from and the device name in the CMSIS-Pack to use.

11.2.3 Embedded Debugger debug configuration options

The extension provides the following task options.

Configuration option	Description
"cmsisPack"	Path (file or URL) to a DFP (Device Family Pack) CMSIS-Pack for your hardware. Command available: <code>device-manager.getDevicePack</code> - Gets the CMSIS-Pack for the selected device.
"connectMode"	Connection mode. Possible values: <code>auto</code> (debugger decides), <code>haltOnConnect</code> (halts for any reset before running), <code>underReset</code> (holds external NRST line asserted), <code>preReset</code> (prereset using NRST), <code>running</code> (connects to running target without altering state). Default: <code>auto</code> .
"dbgconf"	Path (file or URL) to a debug configuration file (dbgconf) file.
"debugFrom"	The symbol that the debugger will run to before debugging. Default: <code>"main"</code> .
"deviceName"	CMSIS-Pack device name. Command available: <code>device-manager.getDeviceName</code> - Gets the device name from the DFP (Device Family Pack) of the selected device.
"pathMapping"	A mapping of remote paths to local paths to resolve source files.
"pdsc"	Path (file or URL) to a PDSC file.
"processorName"	CMSIS-Pack processor name for multicore devices.
"program" or "programs"	Path or paths (file or URL) to one or more projects to use. Commands available: <code>embedded-debug.getBinaryFile</code> : Returns a BIN or HEX file. <code>embedded-debug.getApplicationFile</code> : Returns an AXF or ELF file used for CMSIS run and debug.
"programNames"	Filename or filenames of the projects to be used. Used only for labelling.
"resetAfterConnect"	Resets the hardware after having acquired control of the CPU. Default: <code>true</code> .
"resetMode"	Type of reset to use. Possible values: <code>auto</code> (debugger decides), <code>system</code> (use ResetSystem sequence), <code>hardware</code> (use ResetHardware sequence), <code>processor</code> (use ResetProcessor sequence). Default: <code>auto</code> .
"sdf"	Path (file or URL) to an SDF file.
"serialNumber"	Serial number of the connected USB hardware to use. Command available: <code>device-manager.getSerialNumber</code> - Gets the serial number of the selected device.
"svd" or "svdPath"	Path (file or URL) to an SVD file.
"targetAddress"	Synonymous with <code>serialNumber</code> .
"vendorName"	CMSIS-Pack vendor name.
"verifyApplication"	Verify application against target memory for each application load operation in debug session. Default: <code>true</code> .

Other Visual Studio Code options are also available. Use the **Trigger Suggestions** command (**Ctrl +Space**) to see what is available and read the [Visual Studio Code documentation on tasks](#).

11.2.4 Start an Embedded Debugger session

Start a debug session.


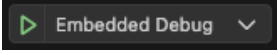

Before you begin

When you have several solutions grouped in a single folder on your machine, Visual Studio Code does not take into account the `tasks.json` and `launch.json` files that you might have created for each solution. Instead, Visual Studio Code generates new JSON files at the root of the workspace in a `.vscode` folder and ignores the other JSON files.

As a result, you might have issues running or debugging a project.

As a workaround, open one solution first, then add other solutions to your workspace with the **File > Add Folder to Workspace** option.

Procedure

1. Check that your device is connected to your computer.
2. To start a debug session, go to the **RUN AND DEBUG** view  and select the **Embedded** Debug configuration in the list , then click **Start Debugging**. Alternatively, if you have installed the Keil Studio Pack, go to the **CMSIS** view and click **Debug**  in the **Solution outline** header, or next to the project that you want to debug.
3. If you are using a device with multiple cores, you must select the appropriate processor for your project in the **Select a processor** drop-down list that displays at the top of the window. The **Run and Debug** view displays and the debug session starts. The debugger stops at the “main” function of your project.
4. Check the **Debug Console** tab to see the debugging output.

11.2.5 Next steps

Look at the [Visual Studio Code documentation](#) to learn more about the debugging features available in Visual Studio Code.

12. Known issues and troubleshooting

Describes known issues with the Keil® Studio extensions and how to troubleshoot some common issues.

12.1 Known issues

Here are the known issues.

Arm CMSIS csolution extension

The CMSIS csolution extension has the following known issues:

- No support for cdefaults.yml. The **Software Components** view and validation do not use the compiler set in the cdefaults file.

Arm Embedded Debugger

The Embedded Debugger extension has the following known issues:

- Support for the DWARF debugging standard is limited to version 4. Please make sure that your application is built with the appropriate settings.
- Variables and registers are read-only.
- Stack trace is limited if the debugger is halted in assembler source files.

12.2 Troubleshooting

Provides solutions to some common issues you might experience when you use the extensions.

12.2.1 Build fails to find toolchain

With the CMSIS csolution extension, errors such as `ld: unknown option: --cpu=Cortex-M4` appear in the build output. In this example, CMSIS-Toolbox is trying to use the system linker rather than Arm® Compiler's armlink.

Solution

1. If you have installed the CMSIS csolution extension separately rather than by using the Keil Studio Pack, make sure that you follow the instructions for [installing and setting up CMSIS-Toolbox](#). In particular, make sure that the `CMSIS_COMPILER_ROOT` environment variable is set correctly. Alternatively, you can install the Keil Studio Pack to benefit from an automated setup with Microsoft vcpkg.
2. Clean the solution. In particular, delete the `out` and `tmp` directories.
3. Run the build again.

12.2.2 Connected development board or debug probe not found

You have connected your development board or debug probe, but the Device Manager extension cannot detect the hardware.

Solution

- Run **Device Manager** (Windows), **System Information** (Mac), or a Linux system utility tool like **hardinfo** (Linux), and then check for warnings beside your hardware. Warnings can indicate that hardware drivers are not installed. If necessary, obtain and install the appropriate drivers for your hardware.
- On Windows: ST development boards and probes require extra drivers. You can [download them from the ST site](#).
- On Windows: Check if you have an Mbed™ serial port driver installed on your machine. The Mbed serial port driver is required with Windows 7 only. Serial ports work out of the box with Windows 8.1 or newer. The Mbed serial port driver breaks native Windows functionality for updating drivers as it claims all the boards with a DAPLink firmware by default. Arm recommends that you uninstall the driver if you do not need it. Alternatively, you can disable it.

You can either:

- Uninstall the Mbed serial port driver (recommended): Open a command prompt as an administrator. Find and delete the `mbdserial_x64.inf` and `mbdcomposite_x64.inf` drivers.

```
pnputil /enum-drivers  
pnputil /delete-driver {oemnumber.inf} /force
```

Then, connect your hardware using a USB cable and open the Windows Device Manager. In **Ports (COM & LPT)** and **Universal Serial Bus controllers**, find the `mbd` entries and uninstall both by right-clicking them. Finally, disconnect and reconnect your hardware.

- Disable the Mbed serial port driver: Open the Windows Device Manager. In **Ports (COM & LPT)**, find the Mbed Serial Port. Right-click it and select **Properties**. Select the **Driver** tab and click **Update Driver**. Click **Browse my computer for drivers** and then click **Let me pick from a list of available drivers on my computer**. Select `USB Serial Device` instead of `mbd Serial Port`.
- On Linux: `udev` rules grant permission to access USB boards and devices. You must install `udev` rules to be able to build a project and run it on your hardware or debug a project.

Clone the [pyOCD repository](#), then copy the rules files which are available in the `udev` folder to `/etc/udev/rules.d/` as explained in the [README.md file](#). Follow the instructions in the `README` file.

After installing the `udev` rules, your connected hardware is detectable in the Device Manager extension. You might still encounter a permission issue when accessing the serial output. If this is the case, run `sudo adduser "$USER" dialout`, and then restart your machine.

- Check that the firmware version of your board or debug probe is supported and update the firmware to the latest version. See [Out-of-date firmware](#) for more details.

- Your board or device might be claimed by other processes or tools (for example, if you are trying to access a board or device with several instances of Visual Studio Code, or with Visual Studio Code and another IDE).
- Activate the **Manage All Devices** setting. This setting allows you to select any USB hardware connected to your computer. By default, the Device Manager extension gives you access only to hardware from known vendors.
 1. Open the settings:
 - On Windows or Linux, go to: **File > Preferences > Settings**.
 - On macOS, go to: **Code > Settings > Settings**.
 2. Find the **Device-manager: Manage All Devices** setting and select its checkbox.

12.2.3 Out-of-date firmware

You have connected your development board or debug probe and a pop-up message appears mentioning that the firmware is out of date.

Solution

Update the firmware of the board or debug probe to the latest version:

- [DAPLink](#). If you cannot find your board or probe on [daplink.io](#), then check the website of the manufacturer for your hardware.
- [ST-LINK](#).
- For other WebUSB-enabled CMSIS-DAP firmware updates, please contact your board or debug probe vendor.



If you are using an FRDM-KL25Z board and the standard DAPLink firmware update procedure does not work, follow this [procedure](#) (requires Windows 7 or Windows XP).

For more information on firmware updates, see also the [Debug Probe Firmware Update Information Application Note](#).

13. Submit feedback

If you have suggestions or if you have discovered an issue with any of the Keil® Studio extensions, please report them to us. Go to the [keil.arm.com support page](#) and use the links provided in the **Keil Studio for VS Code** category.